


SERVICE PARTS LIST

MODEL

GEN PWRBASE 4KW ER+ LA
 GEN PWRBASE 4KW ER+
 GEN PWRBASE 4KW BC ER+
 GEN PWRBASE 5KW ER+
 GEN PWRBASE 5KW ER+ LA
 GEN PWRBASE 5KW ER+
 GEN PWRBASE 5KW ER+ ES

PART NUMBER

PL0544302
 PM0544302.01
 PM0544502
 PM0545303
 PL0545305
 PM0545305.01
 PM0545323

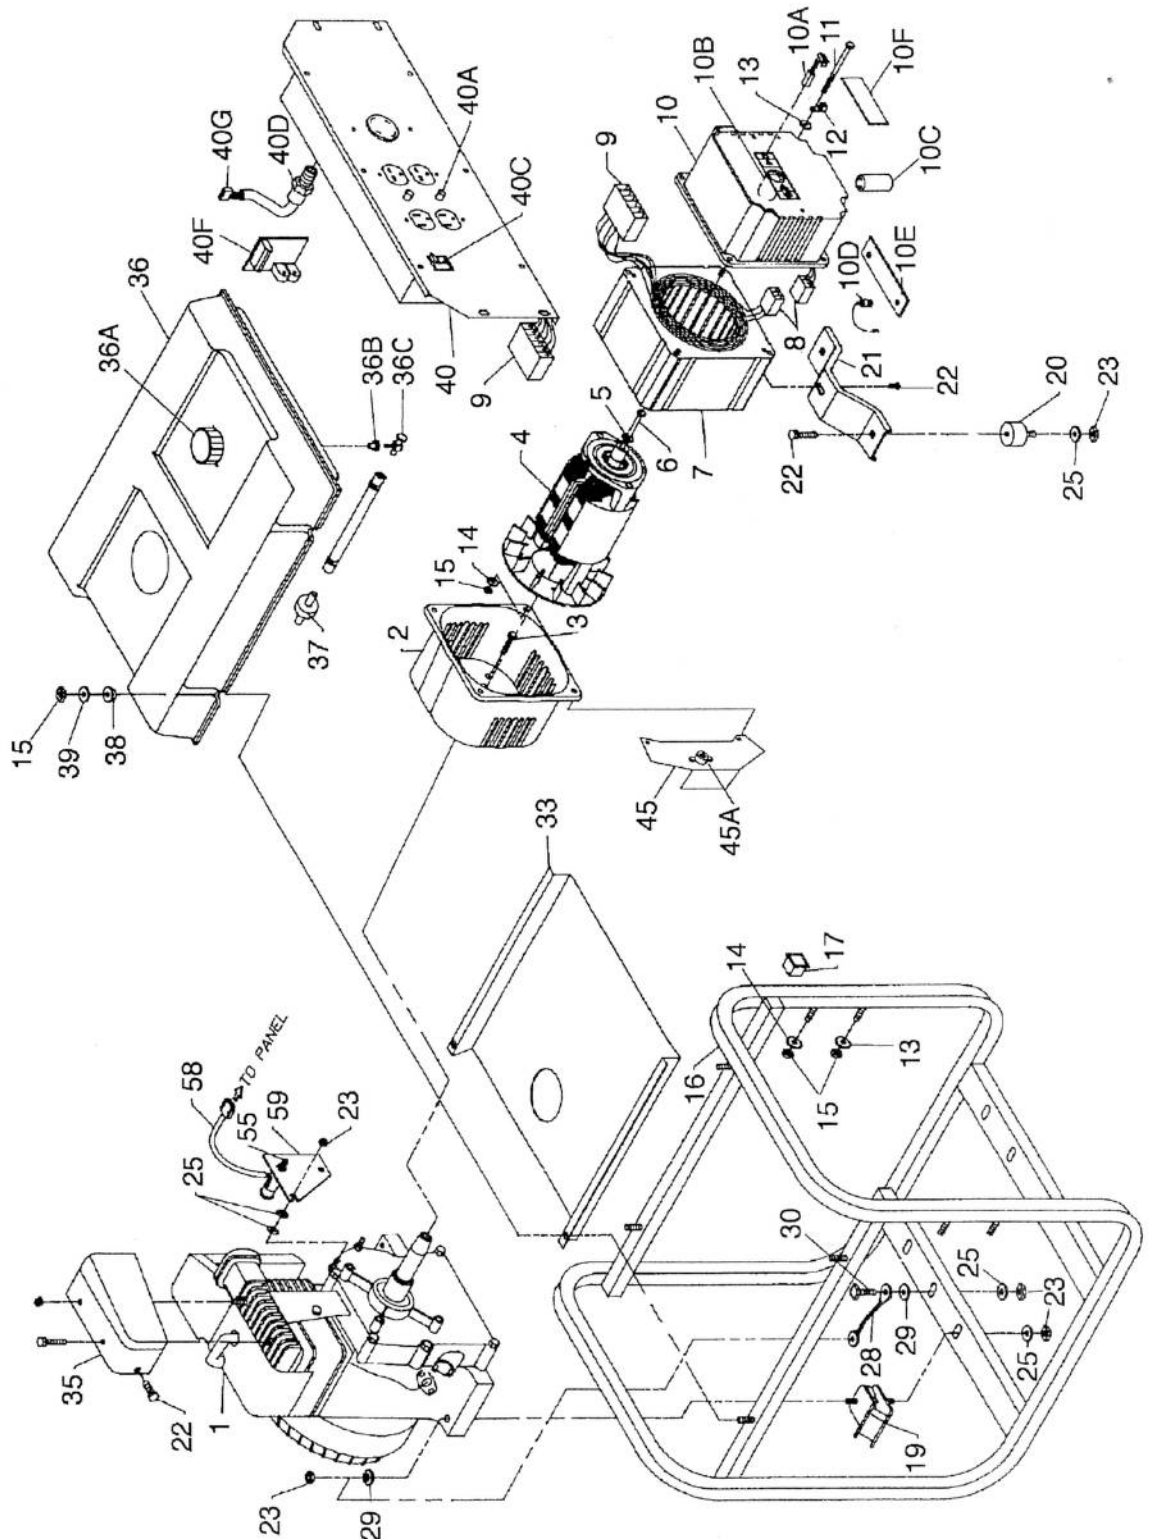

SERVICE PARTS LIST

MODEL

PART NUMBER

GEN PWRBASE 4KW ER+ LA
 GEN PWRBASE 4KW ER+
 GEN PWRBASE 4KW BC ER+
 GEN PWRBASE 5KW ER+
 GEN PWRBASE 5KW ER+ LA
 GEN PWRBASE 5KW ER+
 GEN PWRBASE 5KW ER+ ES

PL0544302
 PM0544302.01
 PM0544502
 PM0545303
 PL0545305
 PM0545305 .01
 PM0545323

REF. NO.	PART NO.	DESCRIPTION	MODEL NUMBER						
			PL0544302	PM0544302.01	PM0544502	PM0545303	PL0545305	PM0545305	PM0545323
1	NOTE A	ENGINE, 8 HP B/S	1	1	1				
1	NOTE A	ENGINE, 10 HP B/S				1	1	1	1
2	0050236.01	ADAPTER, ENGINE 4-7KW B/S PLN	1	1	1	1	1	1	1
4	0049679	ROTOR, 4KW B/S	1	1					
5	0049620	ROTOR, 5KW B/S			1	1	1	1	1
7	0055507	STATOR, 4.0KW 60HZ	1	1					
7	0055550	STATOR, 4.2KW 60HZ			1				
7	0055515	STATOR, 5.0KW 60HZ				1			1
7	0055635	STATOR, 5.0KW 60HZ					1	1	
8	0049835	CONNECTOR HSG. SET, ENDBELL	1	1	1	1	1	1	1
9	0034801	CONNECTOR HSG. SET. PANEL	1	1	1	1			1
9	0049200	CONNECTOR HSG. SET. PANEL					1	1	
10	0048872.01	ENDBELL, WIRED COMPLETE	1	1	1	1	1	1	1
10A	0050439	BRUSH, E-4R	2	2	2	2	2	2	
10B	0035188	BEARING, NEEDLE FTT-1212	1	1	1	1	1	1	
10C	0034819.01	CAPACITOR, 130MF	1	1	1	1	1	1	
10D	0034843	DIODE	2	2	2	2	2	2	2
10E	0038976	HEAT SINK FOR DIODE	1	1	1	1	1	1	1
10F	0038968	COVER, BRUSH	1	1	1	1	1	1	1
10G	0051080	SHIELD, ENDBELL	1	1	1	1	1	1	1
10H	0051093	TOLERANCE RING	1	1	1	1	1	1	1
10I	0050397	RETAINING CLIPS	2	2	2	2	2	2	2
12	0008854	LUG, GROUND	1	1	1	1	1	1	1
16	0051779	CARRIER, ASSY	1	1	1	1	1	1	1
17	0048837	CAP, PLASTIC	4	4	4	4	4	4	4
19	0055524	ISOLATOR, ENGINES	2	2	2	2	2	2	2
20	0051094	ISOLATOR, STATOR	2	2	2	2	2	2	2
21	0049693	BRACKET, STATOR	1	1	1	1	1	1	1
28	0049224	ASSY, GROUND WIRE	1	1	1	1	1	1	1
33	0049453.02	SHIELD, HEAT	1	1	1	1	1	1	1
35	0051532	ASSY, DEFLECTOR	1	1	1	1	1	1	1
36	0049472	TANK ASSEMBLY, COMPLETE	1	1	1	1	1	1	1
36A	0050322	CAP, FUEL	1	1	1	1	1	1	1
36B	0049113	BUSHING, FUEL	1	1	1	1	1	1	1
36C	0049114	VALVE, FUEL	1	1	1	1	1	1	1
37	0047790	FILTER, FUEL	1	1	1	1	1	1	1
38	0048243	BUSHING, STEP	4	4	4	4	4	4	4
40	0050162.01	PANEL, WIRED COMPLETE ER+ LA	1						
40	0050001.01	PANEL, WIRED COMPLETE ER+		1					
40	0050459	PANEL, WIRED COMPLETE ER+			1				
40	0050503.01	PANEL, WIRED COMPLETE ER+ IC				1			1
40	0055482	PANEL, WIRED COMPLETE ER+ LA					1		
40	0055295	PANEL, WIRED COMPLETE ER+						1	
40A	0049459	CIRCUIT BREAKER, 18 AMP	1				1		
40A	0049071	CIRCUIT BREAKER, 20 AMP		2	2				
40A	0049072	CIRCUIT BREAKER, 20 AMP				2		2	2
40C	0047776	SWITCH, ROCKER LIGHTED				1			1
40D	0048900	STRAIN RELIEF, HEYCO 3213				1			1
40F	0050625.01	MODULE, IDLE CONTROL				1			1
40G	0050515	CORD, ASSY				1			1
45	0049897	ASSY, ELECTRIC START							1
45A	0030148	SWITCH, DR-45450A							1
58	0050148.01	ELECTRO-MAGNET ASSY				1			1
59	0051830	BRACKET, IDLE CONTROL				1			1
*	0051291	ASSEMBLY, BATTERY CABLES (NOT SHOWN)			1				

NOTE A: COLEMAN POWERMATE WILL NOT PROVIDE ENGINES AS REPLACEMENT PARTS.
 ENGINES ARE COVERED THROUGH THE ENGINE MANUFACTURER'S WARRANTY.

START DATE: 11/1/97

REVISED: