


Ref #	Part Number	Qty	Description
1	1101556E701		Handle, Upper (Black)
2	672906E701		Handle, Lower (Black)
3	002x77		Bolt
4	071294		Knob, Plastic
5	001x93		Bolt
6	1101418		Throttle Control
7	15x116		Locknut
8	1101427		Engine Stop Cable
11	1101353		Clip, Cable
12	071530		Guide, Rope
13	043653E701		Lever, Engine Stop
14	1101454		Bracket, Stop Lever
17	002x81		Bolt, Carriage
19	071495		Knob, Plastic
20	1101075		Tube, Bag
21	1101074		Frame Assembly
22	1101388		Bag, Cloth - Grey

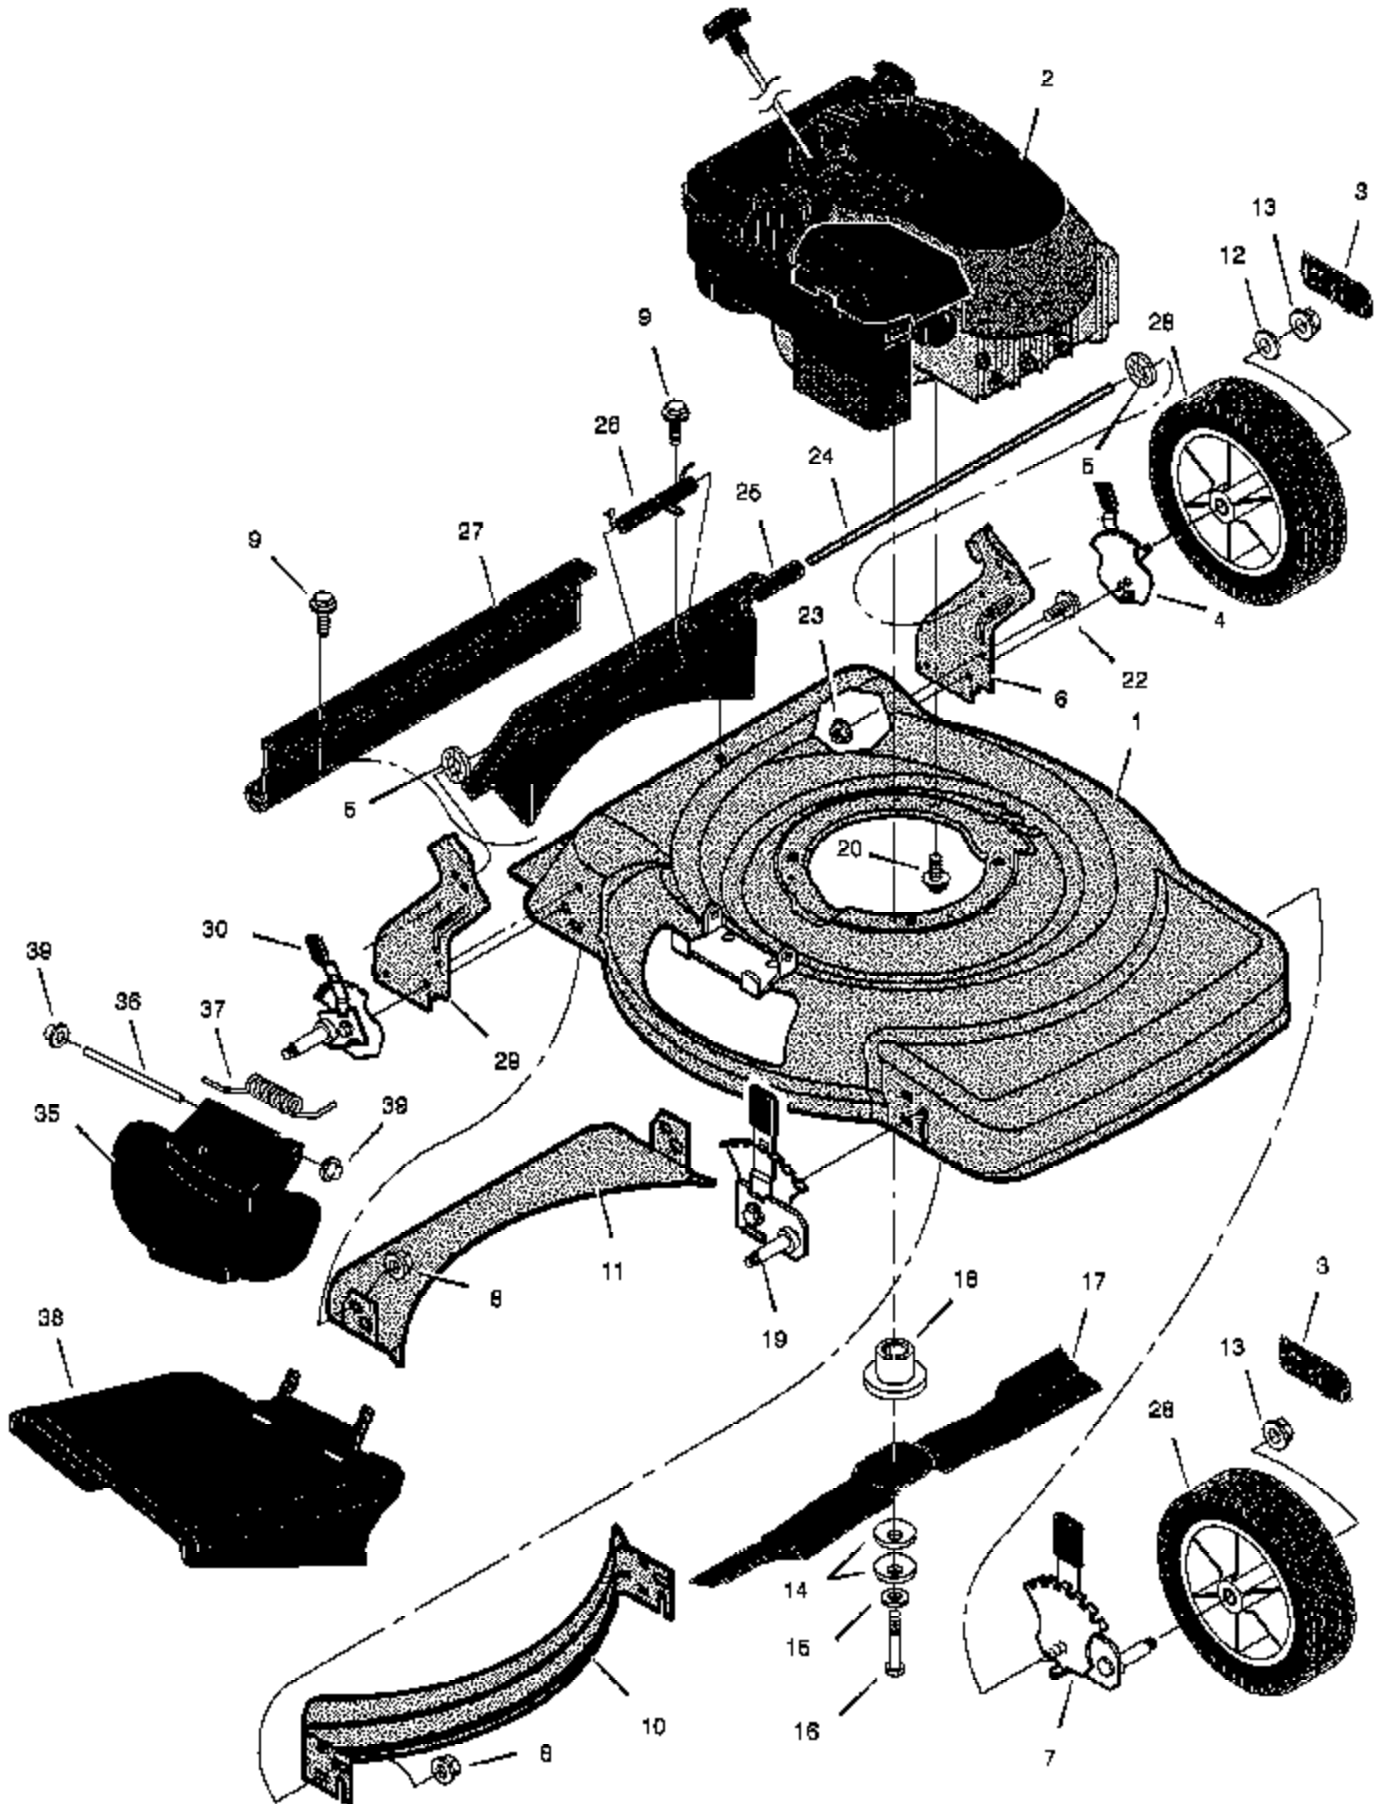

Ref #	Part Number	Qty	Description
1	7501004		Housing
2			Engine Parts are available from an Authorized Engine Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory.
3	1101320		Cap, Hub
4	672605		Adjuster, Left Rear Height
5	028x49		Retainer, Push Included with Key 25.
6	1101239E700		Bracket, Left Handle
7	672601		Adjuster, Left Front Height
8	015x68		Nut, Flange
9	26x245		Screw
10	672915E701		Baffle, Front
11	672916E701		Baffle, Rear
12	017x91		Washer
13	015x84		Nut, Flange
14	17x137		Washer, Belleville
15	17x124		Washer
16	01x142		Bolt
17	1101120E701		Blade
18	071056		Adapter, Blade
19	672600		Adjuster, Right Front Height
20	0025x6		Bolt, Engine
22	001x45		Bolt
23	015x79		Nut, Flange
24	215x21		Rod, Pivot Included with Key 25.
25	1101070		Door, Rear (Black)
26	166x44		Spring Included with Key 25.
27	1101105		Guard, Rear
28	071132		Wheel & Tire
29	1101238E700		Bracket, Right Handle
30	672604		Adjuster, Right Rear Height
35	1101098		Cover, Mulch (Black)
36	215x19 Z		Rod, Pivot
37	166x38		Spring, Torsion
38	1101097		Deflector, Chute (Black)
39	028x42		Push On Cap
			Hardware Bag, Assembly N/A
	F-030424L		Instruction Book