


MODEL 46901x92A

46" S/D - L/T - HYDRO
 16 HP B&S TWIN ENGINE
 DANA/EATON HYDRO SYSTEM
 20X8.00 REAR WHEELS

REPAIR PARTS CHASSIS & HOOD

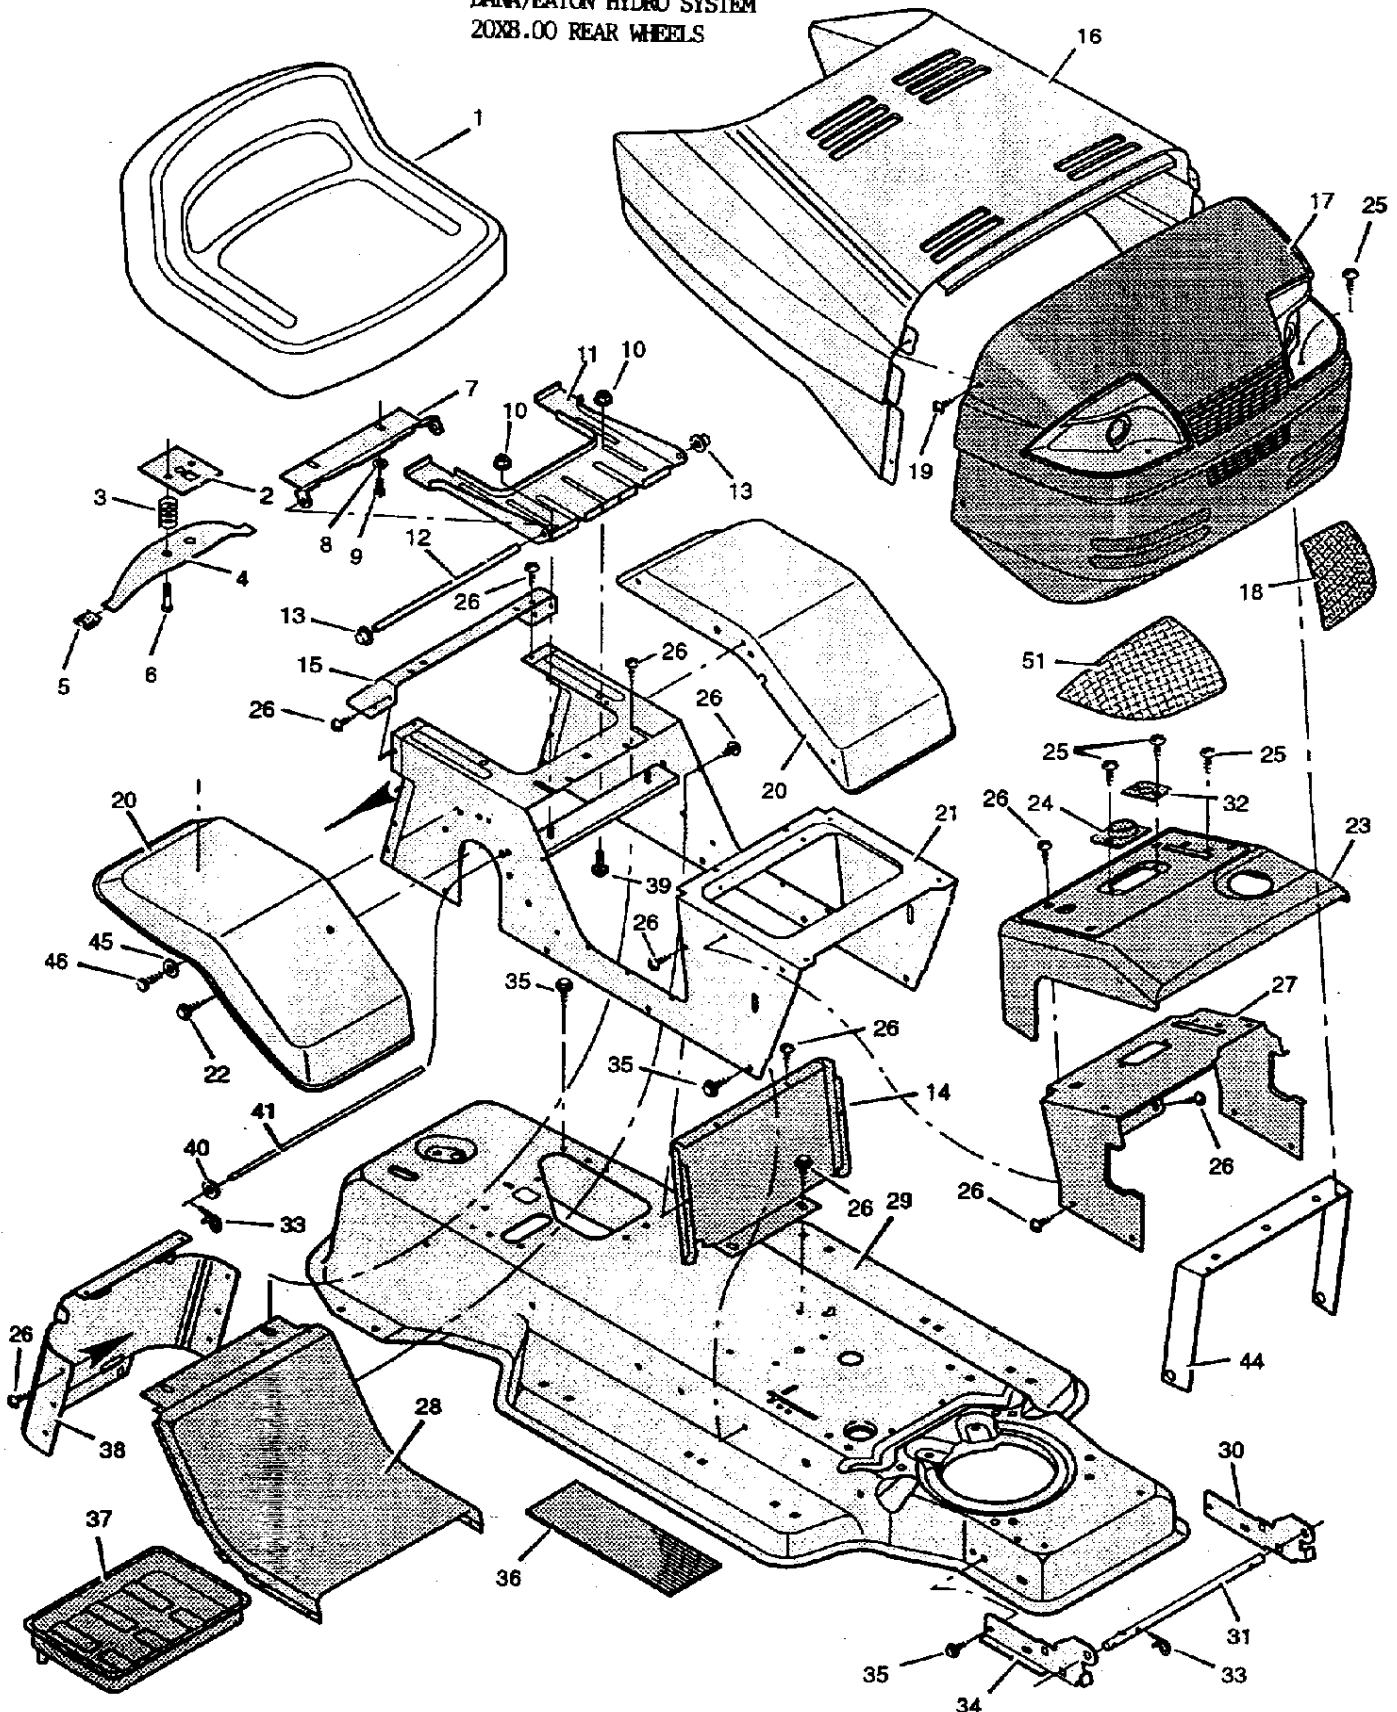

ATTACHMENTS


- | | | | |
|-------|---------------|-------|------------------|
| 24720 | Lawn Sweeper | 24760 | Catcher Assembly |
| 24455 | Snow Blade | 24850 | Vac Wagon |
| 24003 | Wheel Weights | 24577 | Snow Thrower |
| | | 24538 | Tire Chains |

D-7

M32 (3/94)

MODEL 46901x92A**REPAIR PARTS
CHASSIS & HOOD**

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Seat	92606	27	Support, Dash	93136E700
2	Plate Assembly, Switch	91963Z	28	Insert, Rear	92549F200
3	Spring, Compression	164x26	29	Frame Assembly	92515F200
4	Spring, Seat	91964	30	Bracket, Left Grille	92347E700
5	Glide, Spring	91822	31	Rod, Pivot	93137Z
6	Bolt, Shoulder	9x38	32	Bearing	93155
7	Support, Seat	92334E700	33	Pin, Hair	31x4
8	Lockwasher	18x16	34	Bracket, Right Grille	92346E700
9	Bolt, Hex	1x45	35	Screw	26x249
10	Locknut, Flange	15x88	36	Mat	91901
11	Bracket, Pivot	92546E700	37	Tray, Battery	91895
12	Rod, Pivot	91730 Z	38	Cap, Console *	92443F200
13	Cap, Push On	28x23	39	Bolt	2x64
14	Insert, Front	92548F200	40	Washer	17x36
15	Fender, Apron	91724E701	41	Rod, Battery	56566Z
16	Hood	93215F200	44	Brace, Grille	92541Z
17	Grille Assembly (includes Lens)	92542	51	Lens, Right	92539
18	Lens, Left	92540	—	Instruction Book	F-94714
19	Screw	9x47	—	Repair Parts Book	F-94743
20	Fender	92328F200	—	Decal, Left Hood	44x4101
21	Console Assembly	92547F200	—	Decal, Right Hood	44x4100
22	Screw	26x263	—	Decal, Left Console	44x4337
23	Dash Panel	93134	—	Decal, Right Console	44x4338
24	Bearing, Steering	93135	—	Decal, Dash	44x4121
25	Screw	26x239	—	Plaque, Name (Hood)	280x56
26	Screw	26x270	—	Plaque, Name (Grille)	280x57

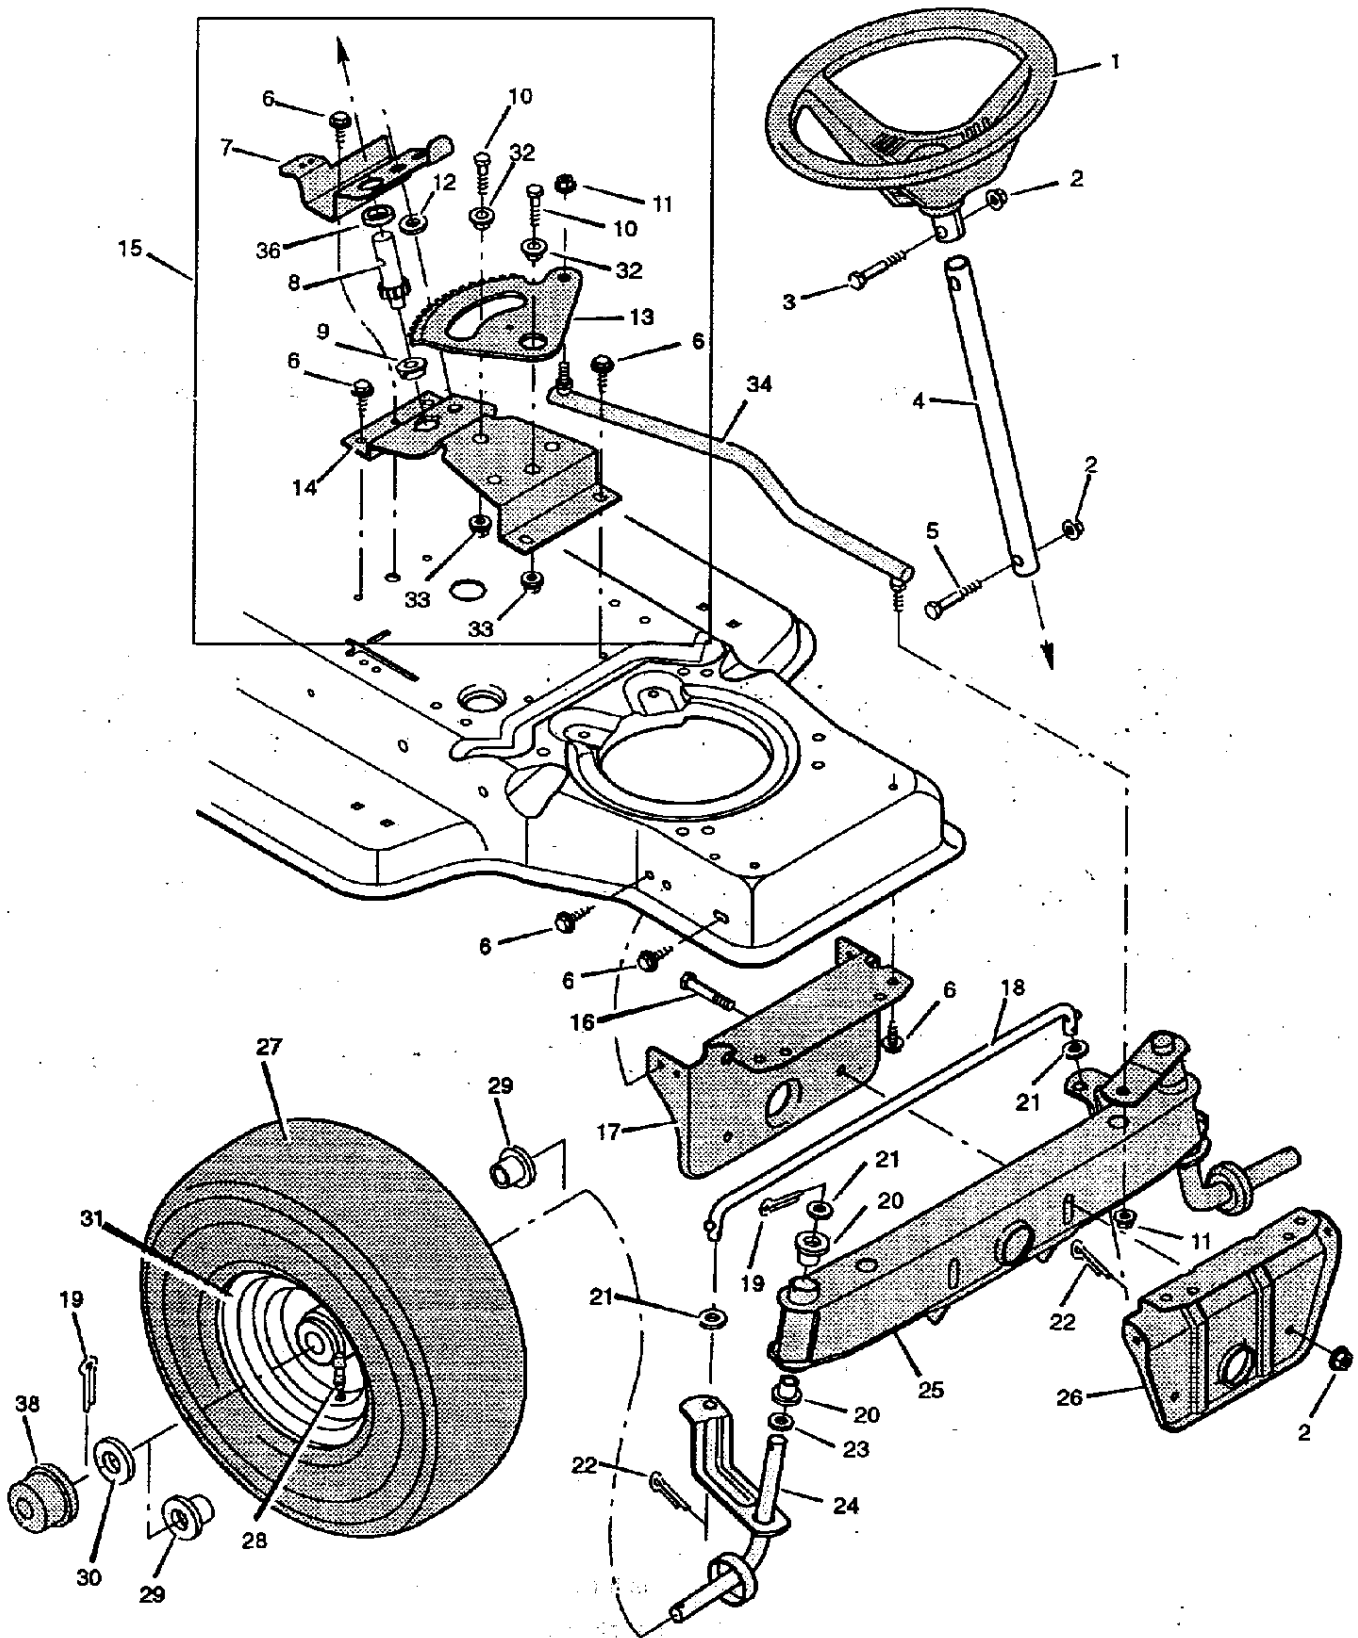


Key No.	Description	Part No.
1	Wheel, Steering	92076
2	Nut, Hex	15x118
3	Bolt, Hex	1x66
4	Post, Steering	91860Z
5	Bolt, Hex	1x74
6	Screw	26x249
7	Bracket, Sector	91716E700
8	Gear, Pinion	92007
9	Bearing	91756
10	Bolt, Hex	1x84
11	Locknut, Flange	15x87
12	Spacer	92564
13	Gear, Sector	92316
14	Bracket, Sector	91708E700
15	Kit, Steering Gear	402075
16	Bolt, Hex	1x146
17	Support, Rear Axle	92529E700
18	Rod, Tie	90038E700
19	Pin, Cotter	30x49
20	Bearing	92527
21	Washer	17x57
22	Pin, Cotter	30x20
23	Washer	17x113
24	Spindle Assembly, Right	91828E701
25	Spindle Assembly, Axle & Left	92519F200
26	Support, Front Axle	92528E701
27	Tire*	91912
—	Tube	407047
28	Stem, Valve	24373
29	Bearing, Wheel	91334
30	Washer	17x115
31	Wheel & Tire Assembly	91912-601
32	Bearing	91334
33	Locknut, Flange	15x113
34	Link, Drag	91749
36	Spacer, Pinion Gear	92280
38	Hub Cap (Optional)	24582

*When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

MODEL 46901x92A

REPAIR PARTS ENGINE MOUNT

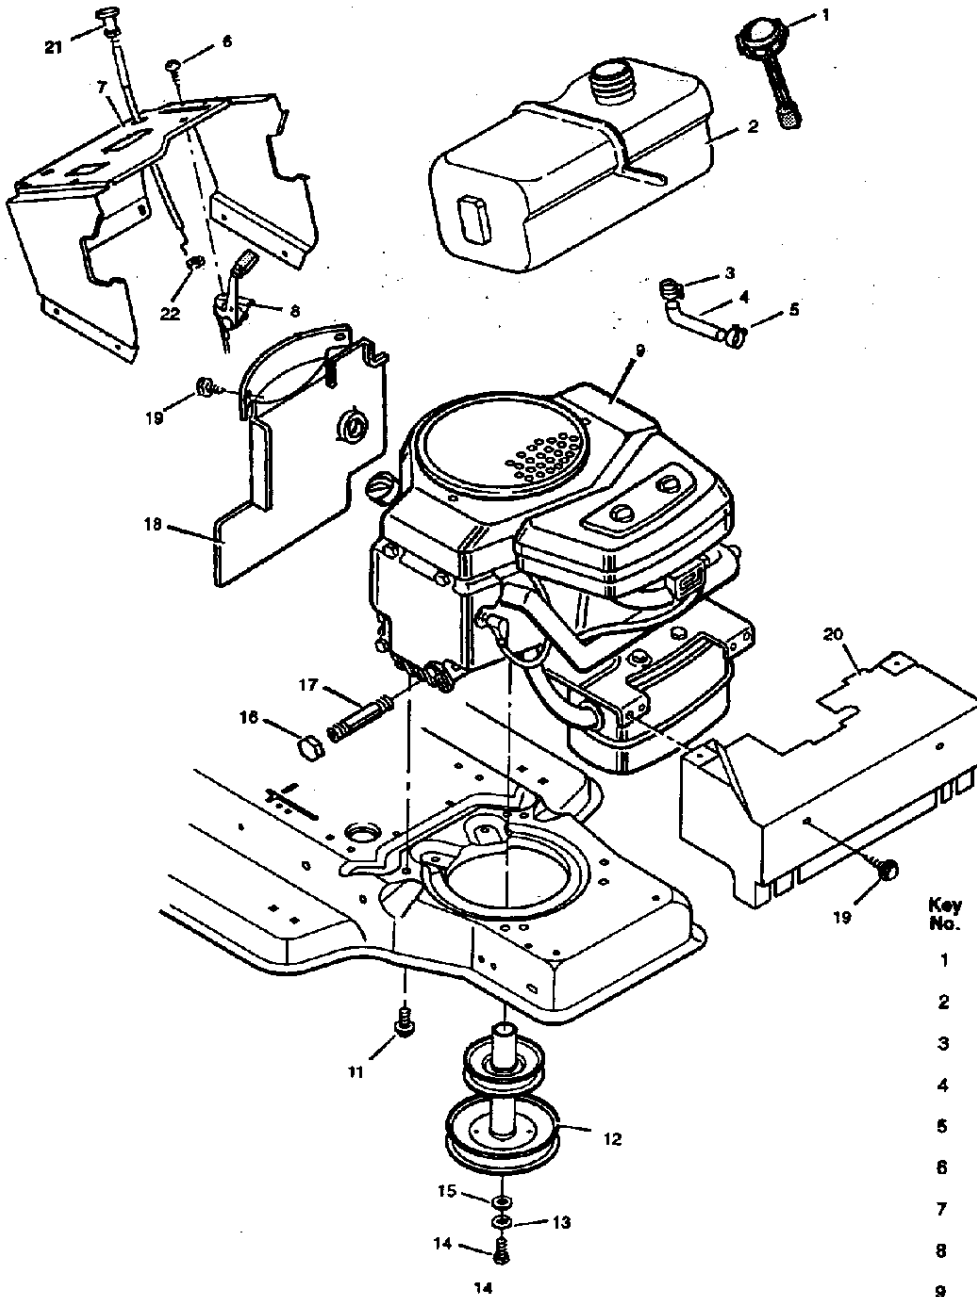



Key No.	Description	Part No.
1	Fuel Cap	91348
2	Fuel Tank	92597
3	Hose Clamp	91174
4	Fuel Line	93198
5	Hose Clamp	23713
6	Screw	26x201
7	Support, Dash	93136E701
8	Throttle Control	93165
9	Engine*	402707-1240-01
11	Bolt, Engine Mount	25x7
12	Stack Pulley Assembly	93245Z
13	Lockwasher	19x35
14	Bolt, Hex	1x140
15	Washer	17x170
16	Cap, Oil Drain	21651
17	Pipe, Oil Drain	92278
18	Baffle, Rear Engine	93078E701
19	Screw	25x2
20	Baffle, Front Engine	93191E701
21	Choke	91326
22	Washer	19x8

MODEL 46901x92A


REPAIR PARTS ELECTRICAL SYSTEM

POS.	FUNCTION	CIRCUIT (MAKE)
1	OFF	G+I
2	RUN LIGHTS	B+L
3	RUN	NONE
4	START	S+S

† NO TERMINAL MARKING

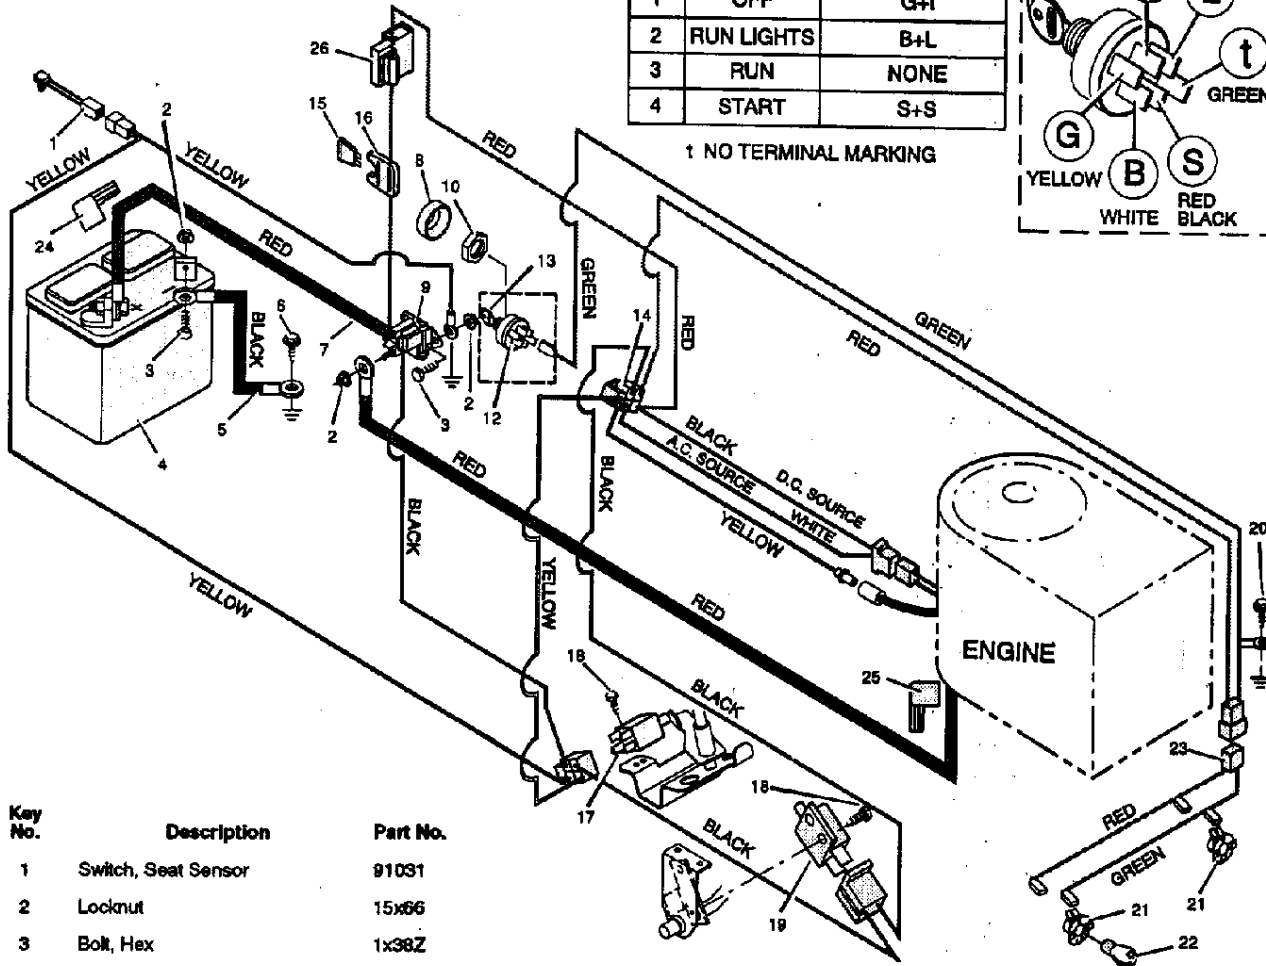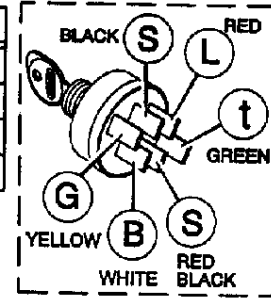

Key No.	Description	Part No.
1	Switch, Seat Sensor	91031
2	Locknut	15x66
3	Bolt, Hex	1x38Z
4	Battery	92691
5	Cable, Battery Ground	24x9
6	Screw	26x249
7	Cable, Red Battery	24x12
8	Cap, Ignition	91488
9	Solenoid	24285
10	Nut, Hex	91488
12	Switch, Ignition	92377
13	Key, Ignition	20728
14	Harness, Chassis Wire	250x52
15	Fuse	54212
16	Holder, Fuse	407078
17	Switch, PTO	91299
18	Screw	26x233
19	Switch, Clutch	24273
20	Engine	25x2
21	Socket, Light	92372
22	Bulb, Light	90084
23	Harness, Light Wire	250x40
24	Cover, Terminal	54148
26	Ammeter	93156

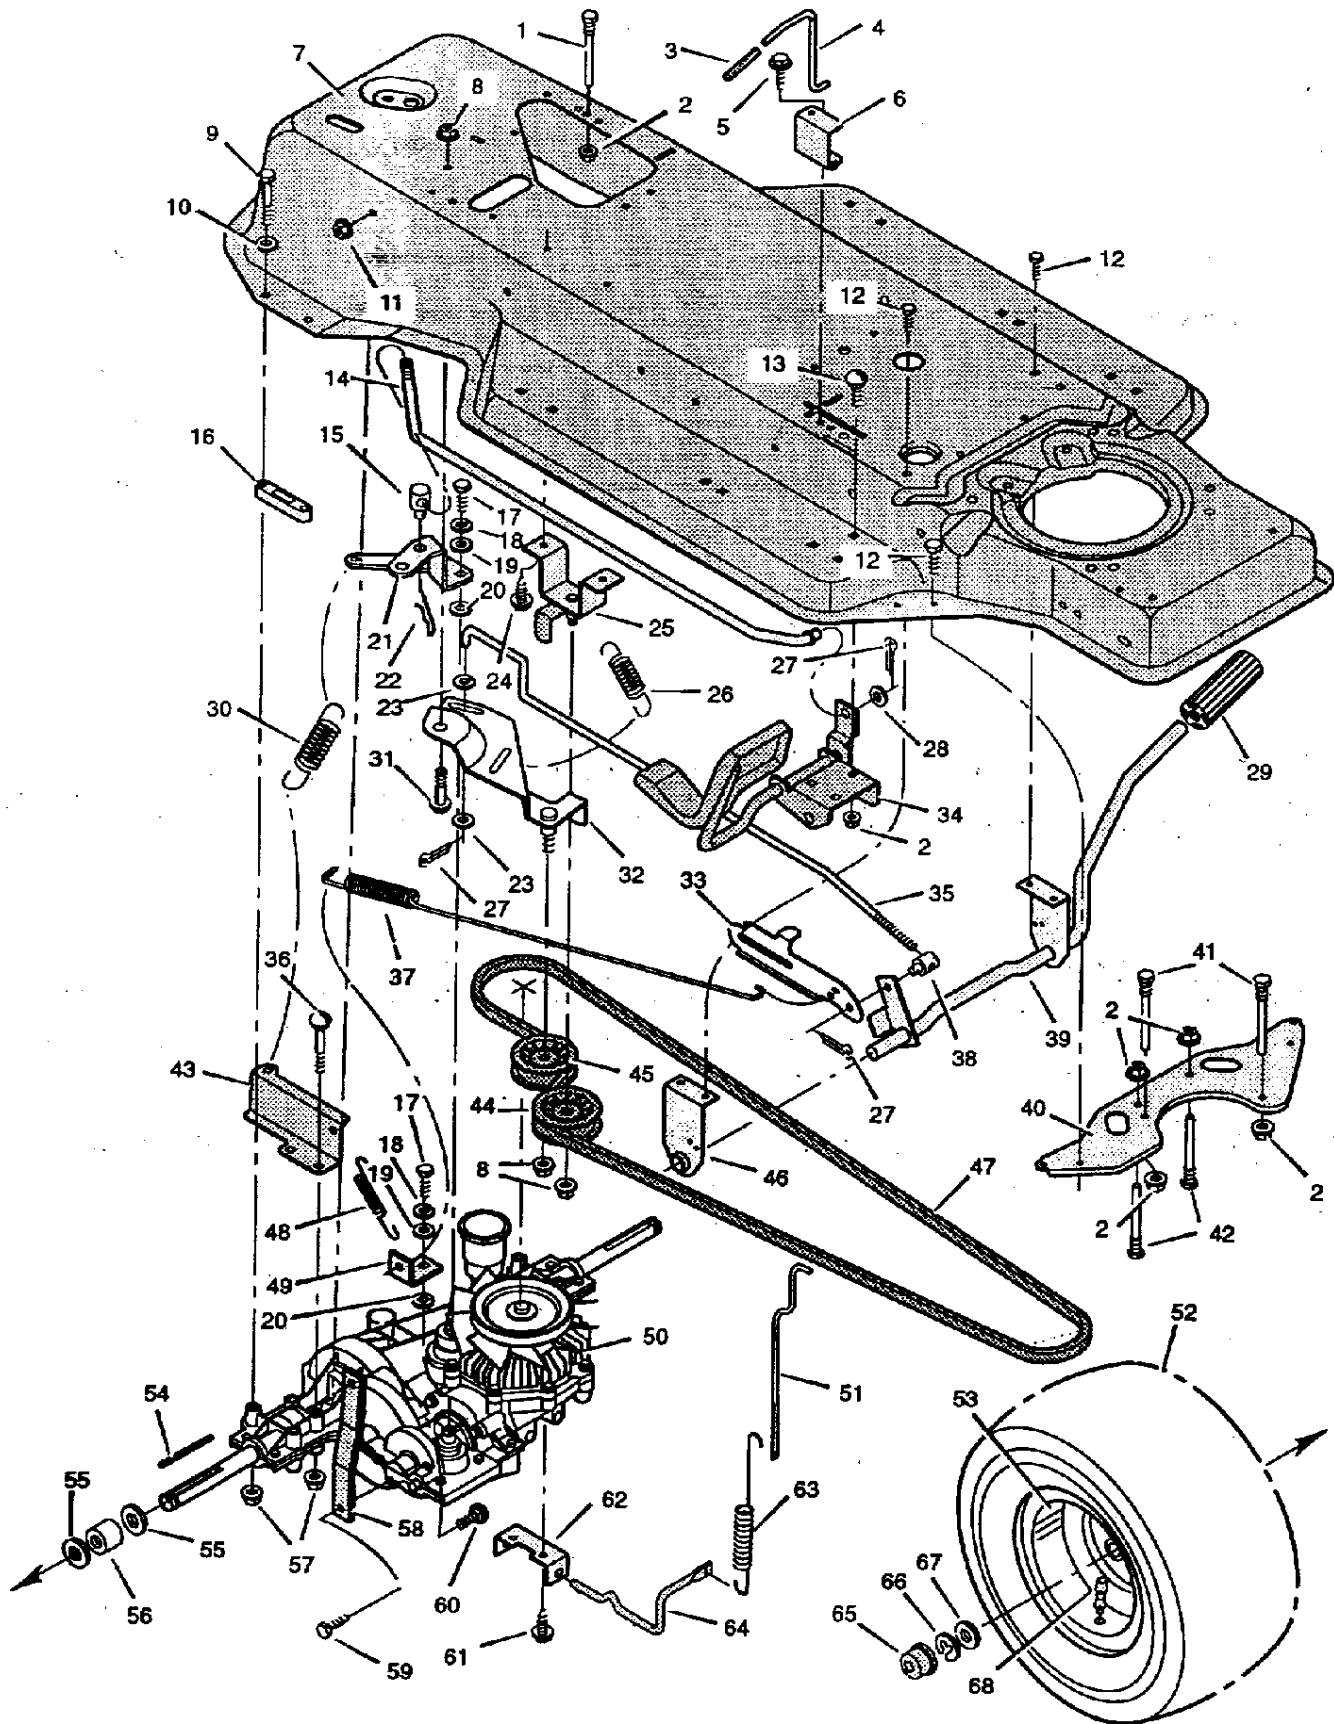

MODEL 46901x92A

REPAIR PARTS MOTION DRIVE


Key No.	Description	Part No.	Key No.	Description	Part No.
1	Guide, Belt	92632	36	Carriage Bolt	2x58
2	Nut, Flange	15x79	37	Spring, Extension	165x101
3	Grip	91079	38	Nut, Adjusting	21920
4	Rod, Parking Brake	91727 Z	39	Pedal Lever Assembly	91862E700
5	Screw	26x214	40	Bracket, Belt Guide	92567E700
6	Bracket, Guide	91825 Z	41	Screw, Guide	91754Z
7	Frame Assembly	92515F200	42	Screw, Guide	20619Z
8	Nut, Flange	15x84	43	Bracket, Spring Mount	92570Z
9	Bolt	1x118	44	Idler Pulley	91178
10	Washer	17x146	45	Idler Pulley	91179
11	Nut, Flange	15x79	46	Support, Pedal	91713E700
12	Screw	26x249	47	V-Belt	37x80
13	Bolt, Carriage	2x53	48	Spring, Extension	165x92
14	Rod, Control	92631Z	49	Lever, Brake	92569E700
15	Nut, Adjusting	92132	50	Transaxle	**
16	Spacer, Hydro	92682	51	Rod, Dump Valve	92674Z
17	Bolt	1x82	52	Wheel Tire Assembly	92290-601
18	Lock Washer	18x32	53	Tire (Included with Key No. 52) *	92374
19	Washer	17x38	—	Tube (Included with Key No. 52)	407049
20	Washer	17x148	54	Square Key	21553
21	Lever, Control	92594Z	55	Washer	17x160
22	Hair Pin	31x4	56	Spacer, Wheel	87x100Z
23	Washer	17x47	57	Nut, Flange	15x115
24	Screw	26x249	58	Strap, Torque	92568E700
25	Idler Mount Assy	92565E700	59	Screw	26x216
26	Spring, Extension	165x98	60	Carriage Bolt	2x64
27	Cotter Pin	30x20	61	Screw	26x275
28	Washer	17x57	62	Bracket, Dump Valve	92603Z
29	Pedal	21544	63	Spring, Extension	165x104
30	Spring, Extension	165x99	64	Rod, Dump Valve	93247Z
31	Shoulder Bolt	9x39	65	Hub Cap (Optional)	24582
32	Idler Bracket Assembly	92029 5E	66	E-Ring	11x3
33	Latch, Parking Brake	91712Z	67	Washer	17x115
34	Pedal Assembly	92676E700	68	Valve Stem	24373
35	Clutch Rod	91808Z			

* When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.


** Parts are available from an Authorized Service Center. See the telephone directory.

MODEL 46901x92A

REPAIR PARTS
MOWER HOUSING SUSPENSION

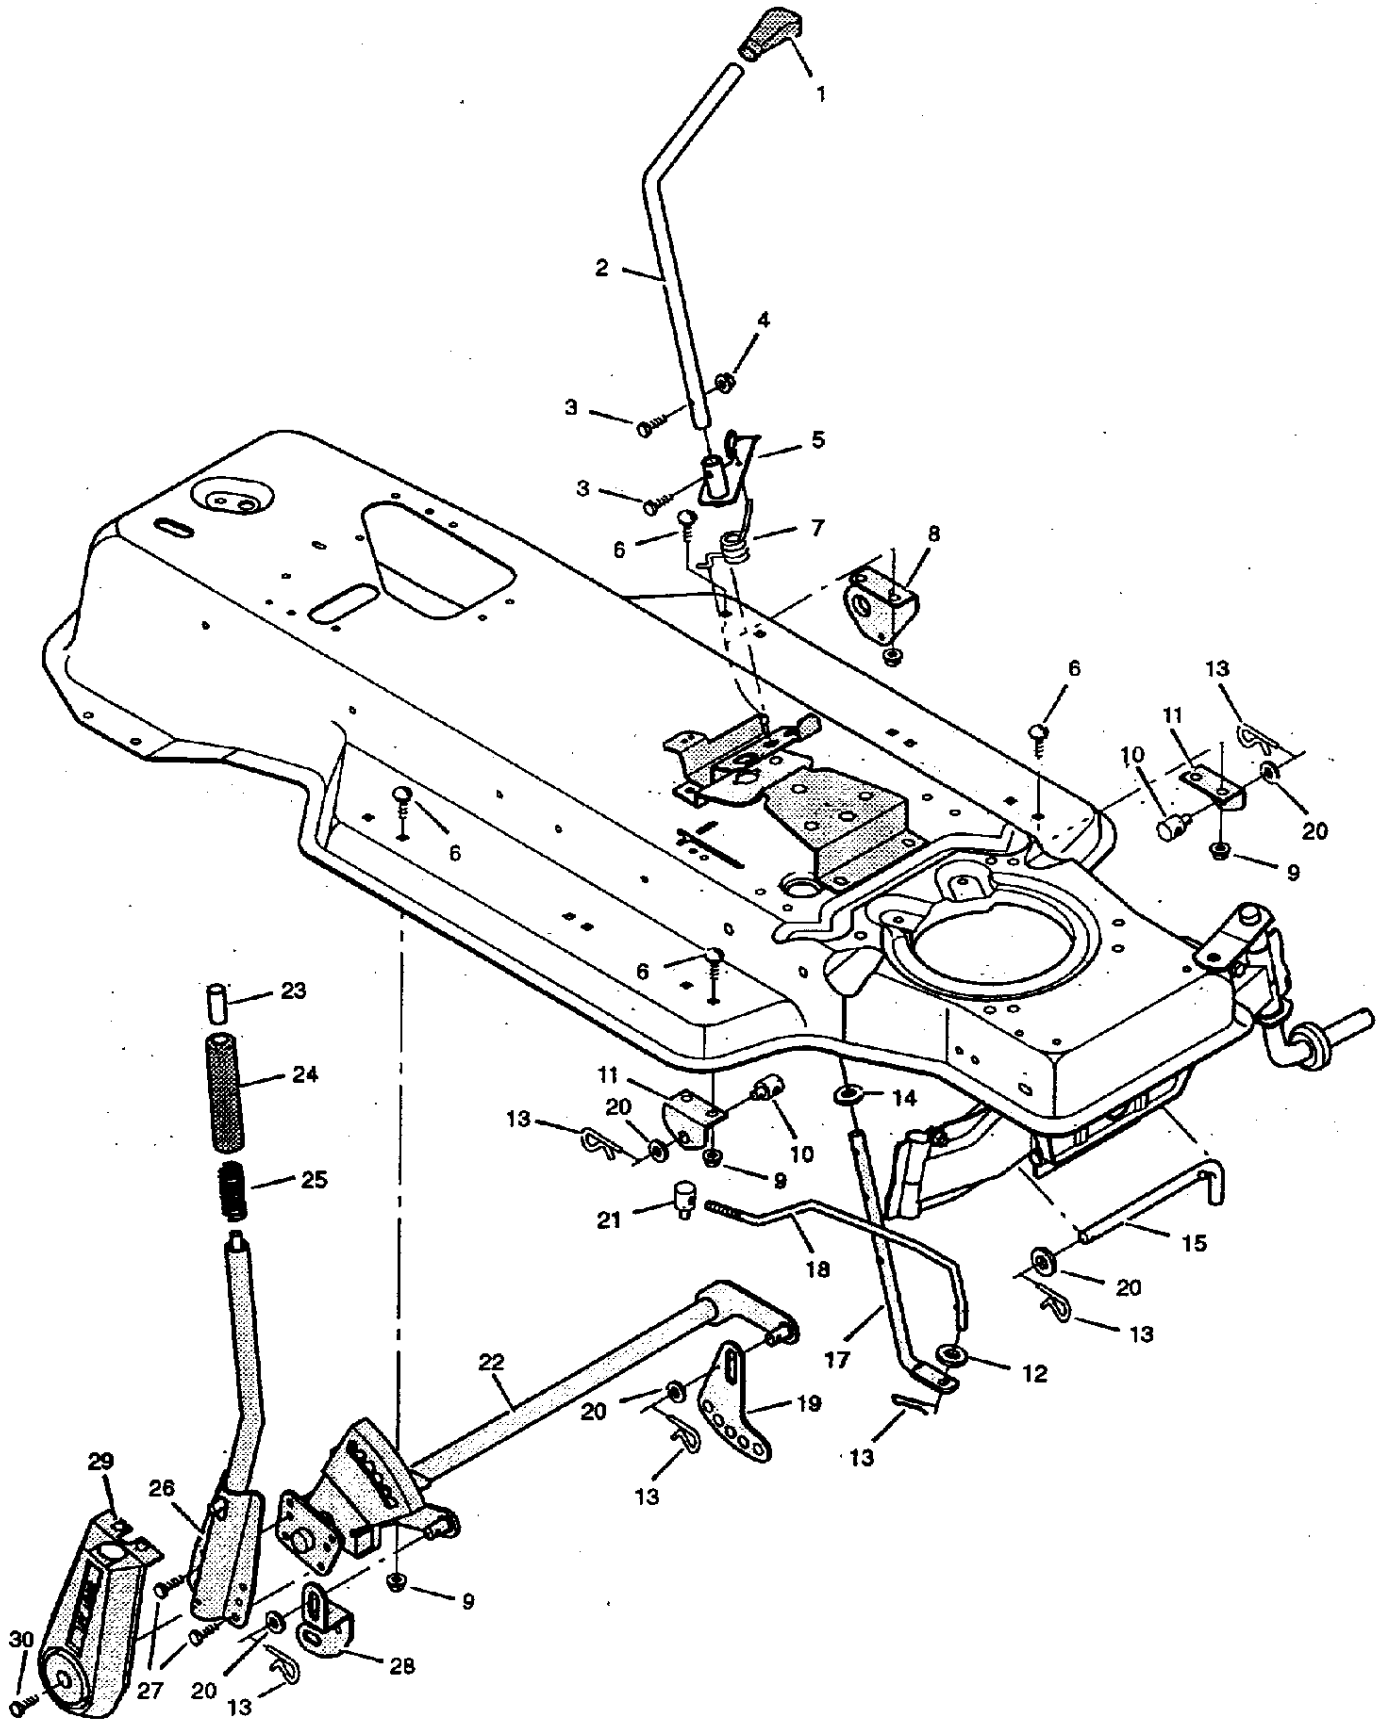

Key No.	Description	Part No.
1	Grip	55449
2	Lever, Blade Control	92238Z
3	Bolt, Hex	25x3
4	Locknut, Hex	15x67
5	Lever Assembly, Switch	91917E700
6	Bolt, Carriage	2x53
7	Spring, Torsion	166x32
8	Bracket, Adjuster Rod	92066E700
9	Nut, Flange	15x79
10	Nut, Adjusting	92132
11	Bracket, Adjuster Rod	92133SE
12	Washer	17x47Z
13	Pin, Hair	31x4
14	Washer	17x122
15	Pin, Pull	90827Z
17	Lever, Lower Blade Control	91787E700
18	Rod, Blade Control	92118Z
19	Plate, Adjuster	91741E701
20	Washer	17x103
21	Nut, Adjusting	21920
22	Lifter Assembly	92705E700
23	Knob, Steel	91261
24	Grip	91398
25	Spring, Compression	164x21
26	Handle Assembly	91823SE
27	Screw	26x49
28	Link, Suspension	92110E700
29	Cover, Lift Lever (Optional)	92157
30	Screw	26x263

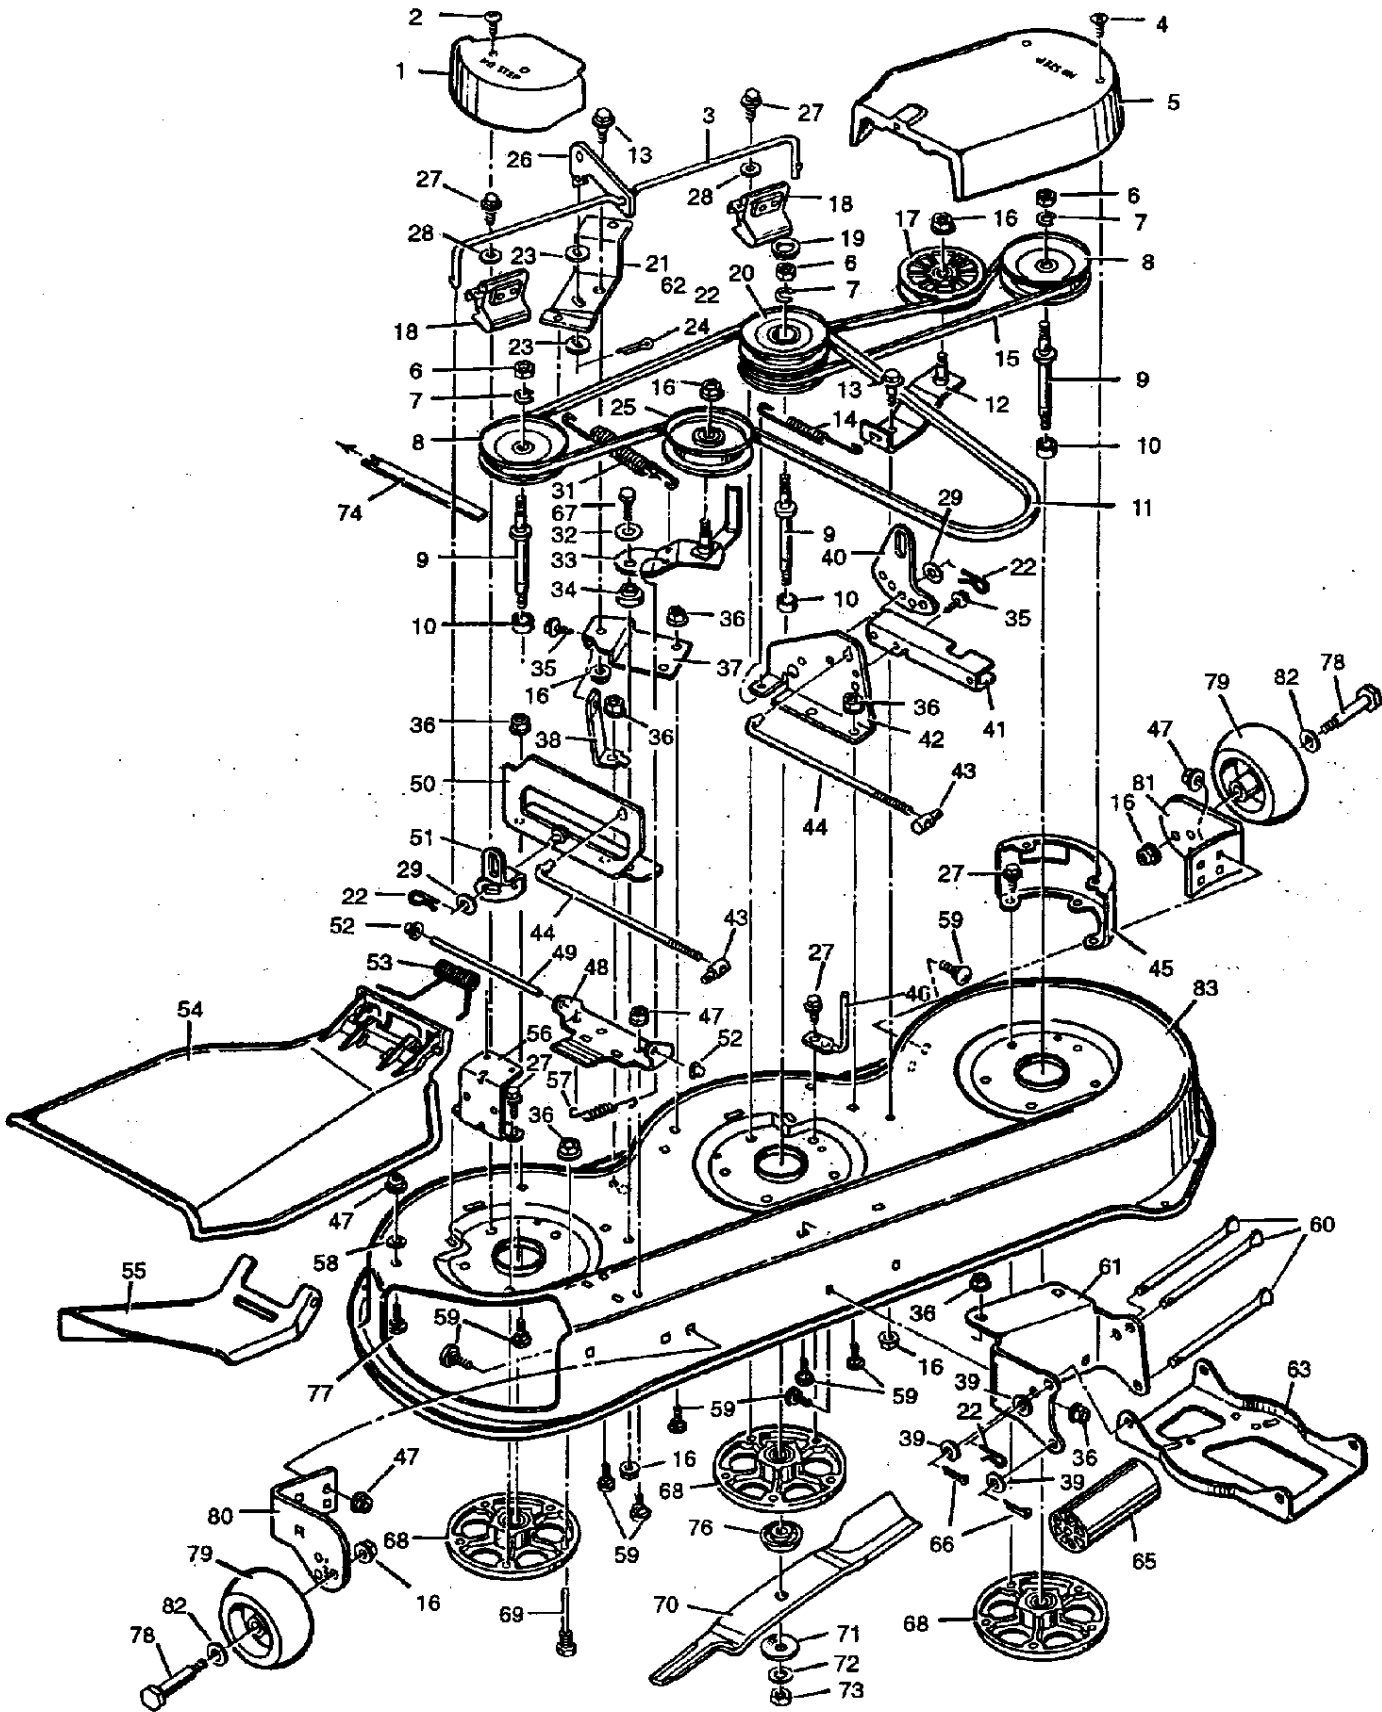

MODEL 46901x92A

REPAIR PARTS MOWER HOUSING

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Cover, Pulley	92145	43	Nut, Adjuster	92132
2	Screw	26x266	44	Rod, Adjuster	92134Z
3	Rod, Brake	92129Z	45	Bracket, Left Cover	92139E700
4	Screw	26x258	46	Guide, Belt	92116Z
5	Cover, Left Pulley	92154	47	Locknut	15x88
6	Nut, Hex	15x100	48	Bracket, Hinge	92104E700
7	Lockwasher	18x33	49	Rod, Deflector	92159Z
8	Pulley	92127	50	Bracket Assembly, Lifter	93088E700
9	Jackshaft	91921	51	Link, Suspension	92110E700
10	Spacer, Bearing	91925	52	Push-On Cap	28x23
11	Belt, Primary Mower Drive	37X70	53	Spring, Torsion	166x34
12	Bracket, Idler	92112E700	54	Deflector	92100
13	Bolt, Shoulder	9x39	55	Deflector, Inside	92103E700
14	Spring, Extension	165x79	56	Bracket, Cover	92140E700
15	Belt, Secondary Mower Drive	37x66	57	Spring, Extension	165x86
16	Locknut	15x84	58	Washer	17x57Z
17	Pulley, Idler	91590	59	Bolt, Carriage	2x53Z
18	Spring Assembly, Brake	92148	60	Rod, Hanger	91739Z
19	Plug	92169	61	Bracket, Front Hanger	93087E700
20	Pulley, Stack	92128	62	Washer	17x124
21	Bracket, Pivot	92136E700	63	Hanger, Front	921195E
22	Pin, Hair	31x4	65	Roller	92137
23	Washer	17x171Z	66	Pin, Cotter	30x49
24	Pin, Cotter	30x33	67	Bolt, Hex	1x111Z
25	Pulley, Idler	91801	68	Housing, Mandrel	92574
26	Link, Brake	92130Z	69	Guide, Belt	91754Z
27	Screw	25x6	70	Blade (3 required)	92117E701
28	Washer	10851Z	71	Washer, Belleville	17x166
29	Washer	17x91Z	72	Washer	17x165
31	Spring, Extension	165x80	73	Nut, Hex	15x100
32	Washer	17x168Z	74	Indicator, Plastic	92163
33	Bracket, Idler	92220E700	76	Adapter, Blade	92466
34	Bushing	92180	77	Bolt, Carriage	2x73
35	Screw	26x249	78	Bolt, Shoulder	9x23
36	Nut, Hex	15x79Z	79	Wheel, Gauge	92265
37	Support, Pivot	92115E700	80	Bracket, Right Gauge Wheel	92259E700
38	Strut, Pivot	92158E700	81	Bracket, Left Gauge Wheel	92258E700
39	Washer	17x103	82	Washer	17x102
40	Plate, Adjuster	91741E700	83	Housing, Mower	93086E700
41	Channel, Left Cover	92138E700	1-83	Mower Housing, Complete	403334A
42	Bracket Assembly, Lifter	92109E700			