



# Illustrated Parts List

## Model Series

# 126T00

TYPE NUMBERS  
0004 through 3842.

### TABLE OF CONTENTS







Air Cleaner .....	4
Blower Housing/Shrouds .....	6
Camshaft .....	2
Carburetor .....	3
Controls .....	5
Crankshaft .....	2
Cylinder .....	2
Electric Starter .....	7
Electrical .....	5
Engine Sump .....	2
Exhaust System .....	4
Flywheel .....	7
Flywheel Brake .....	5
Fuel Supply .....	3
Governor Spring .....	5
Ignition .....	5
Kits/Gaskets .....	2 & 3
Lubrication .....	2
Piston Group .....	2
Rewind Starter .....	7
Valves .....	2












PRINTED IN U.S.A.




COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



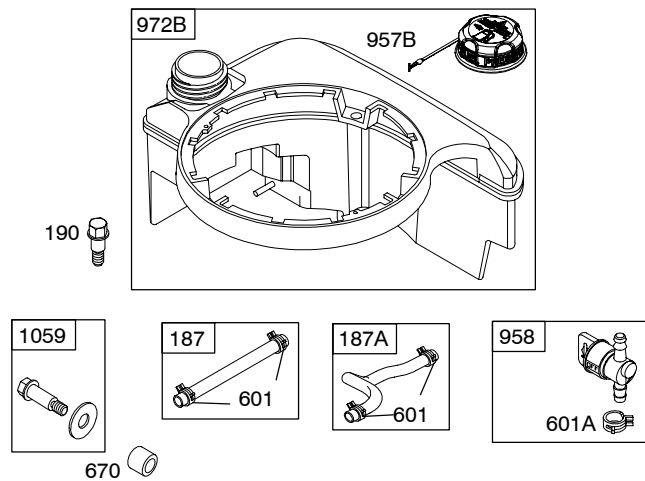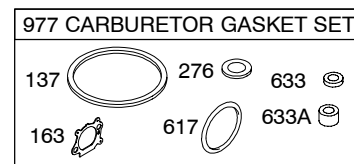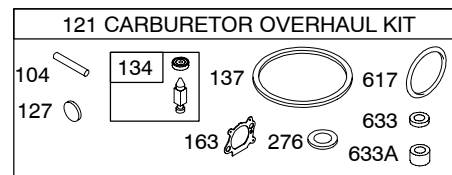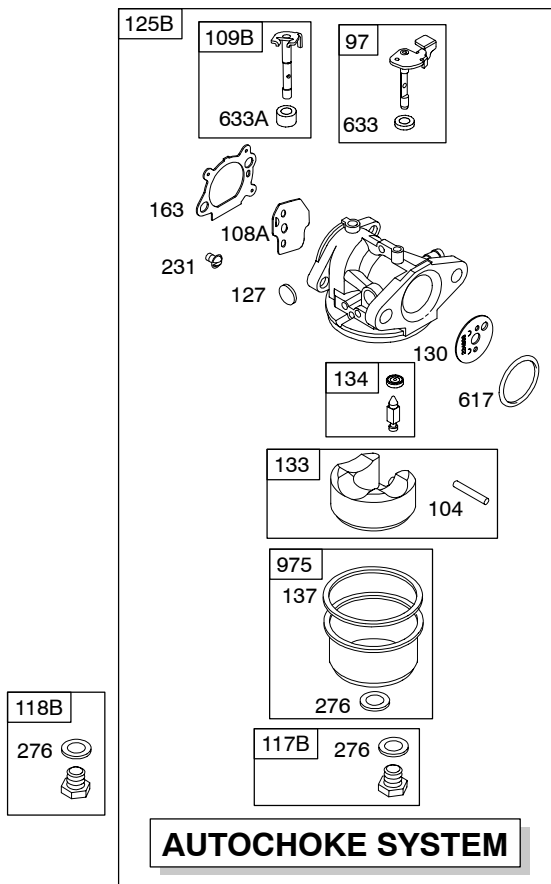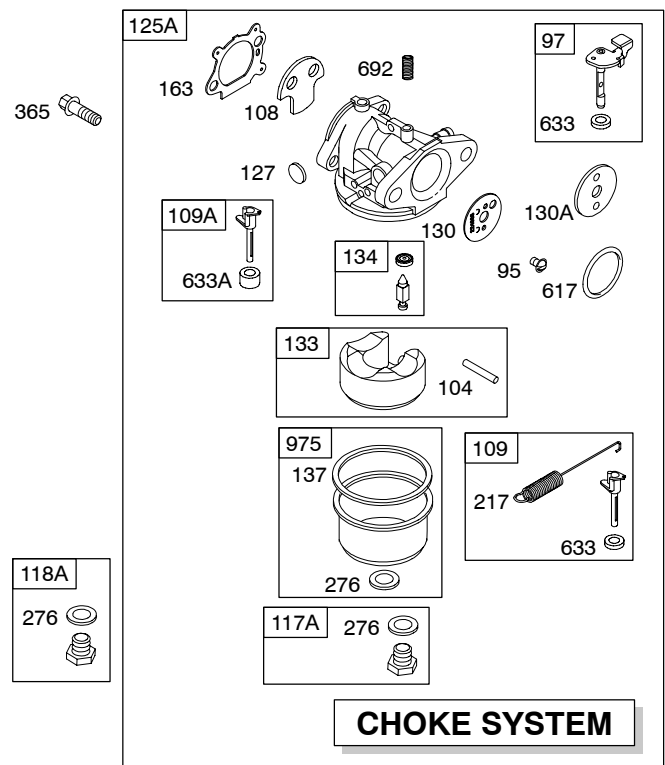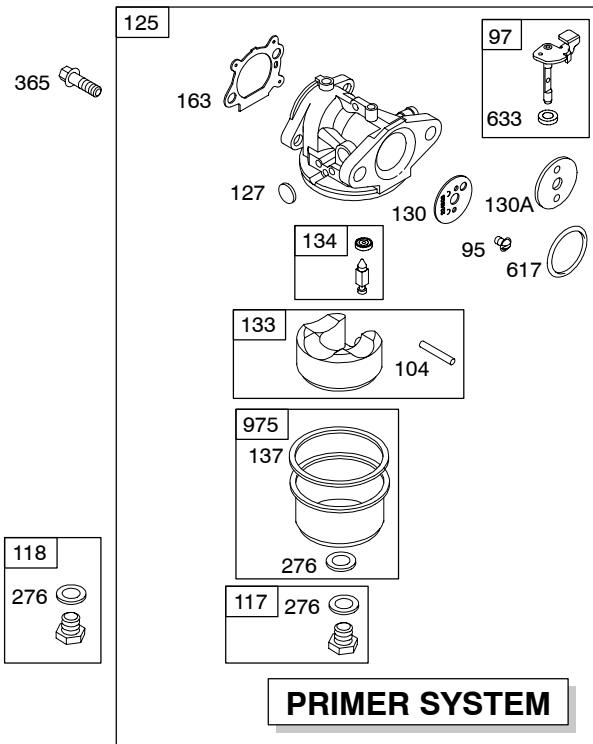


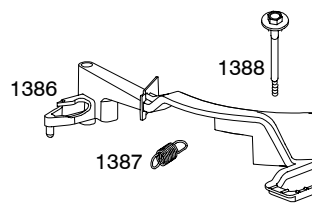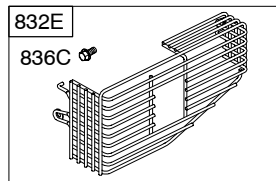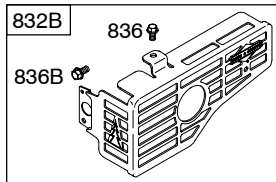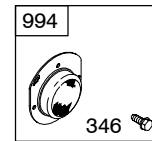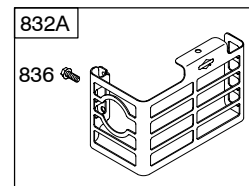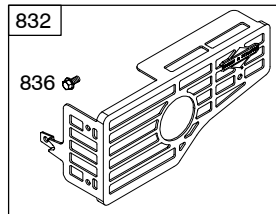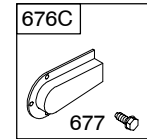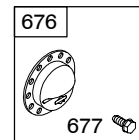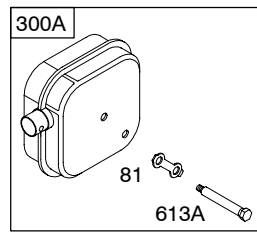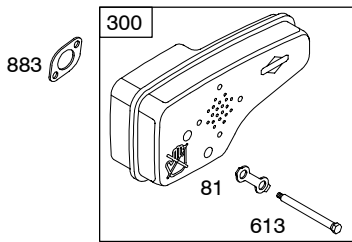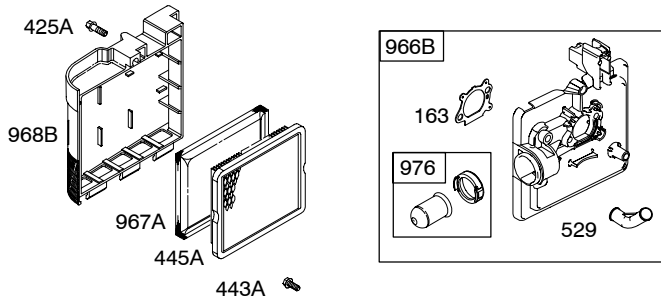





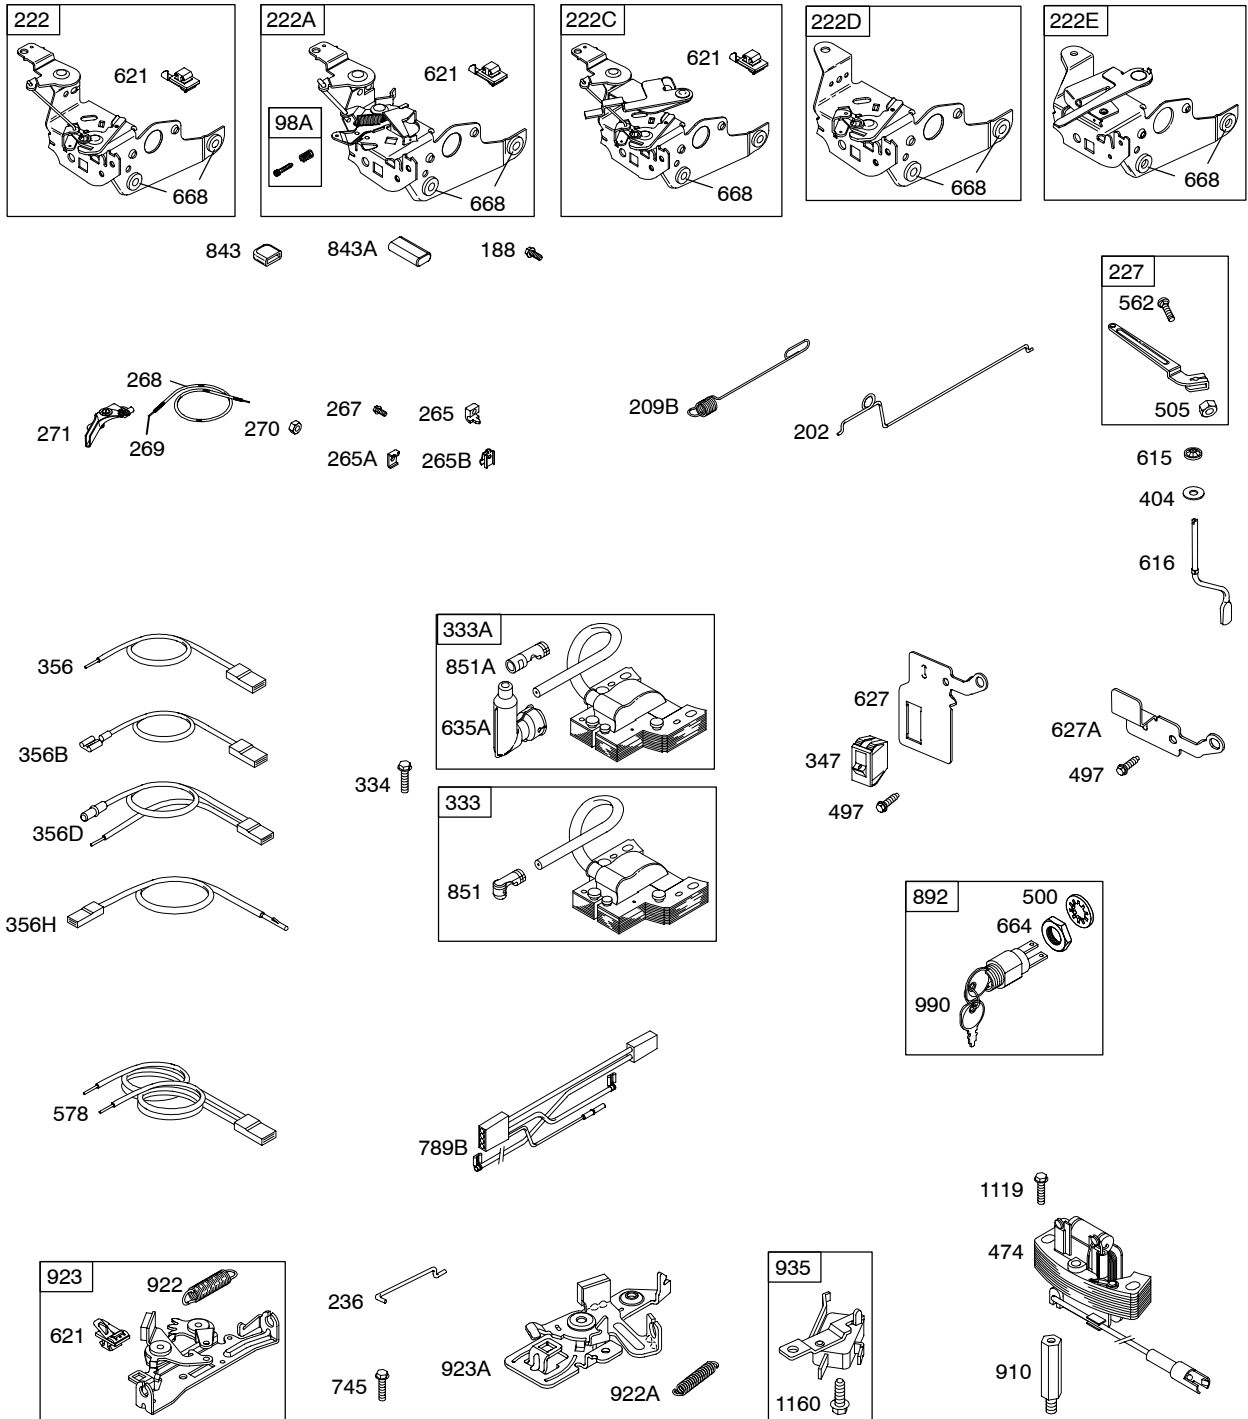


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 3728-5 Assemblies include all parts shown in frames. 09/15/2007

# 126T00

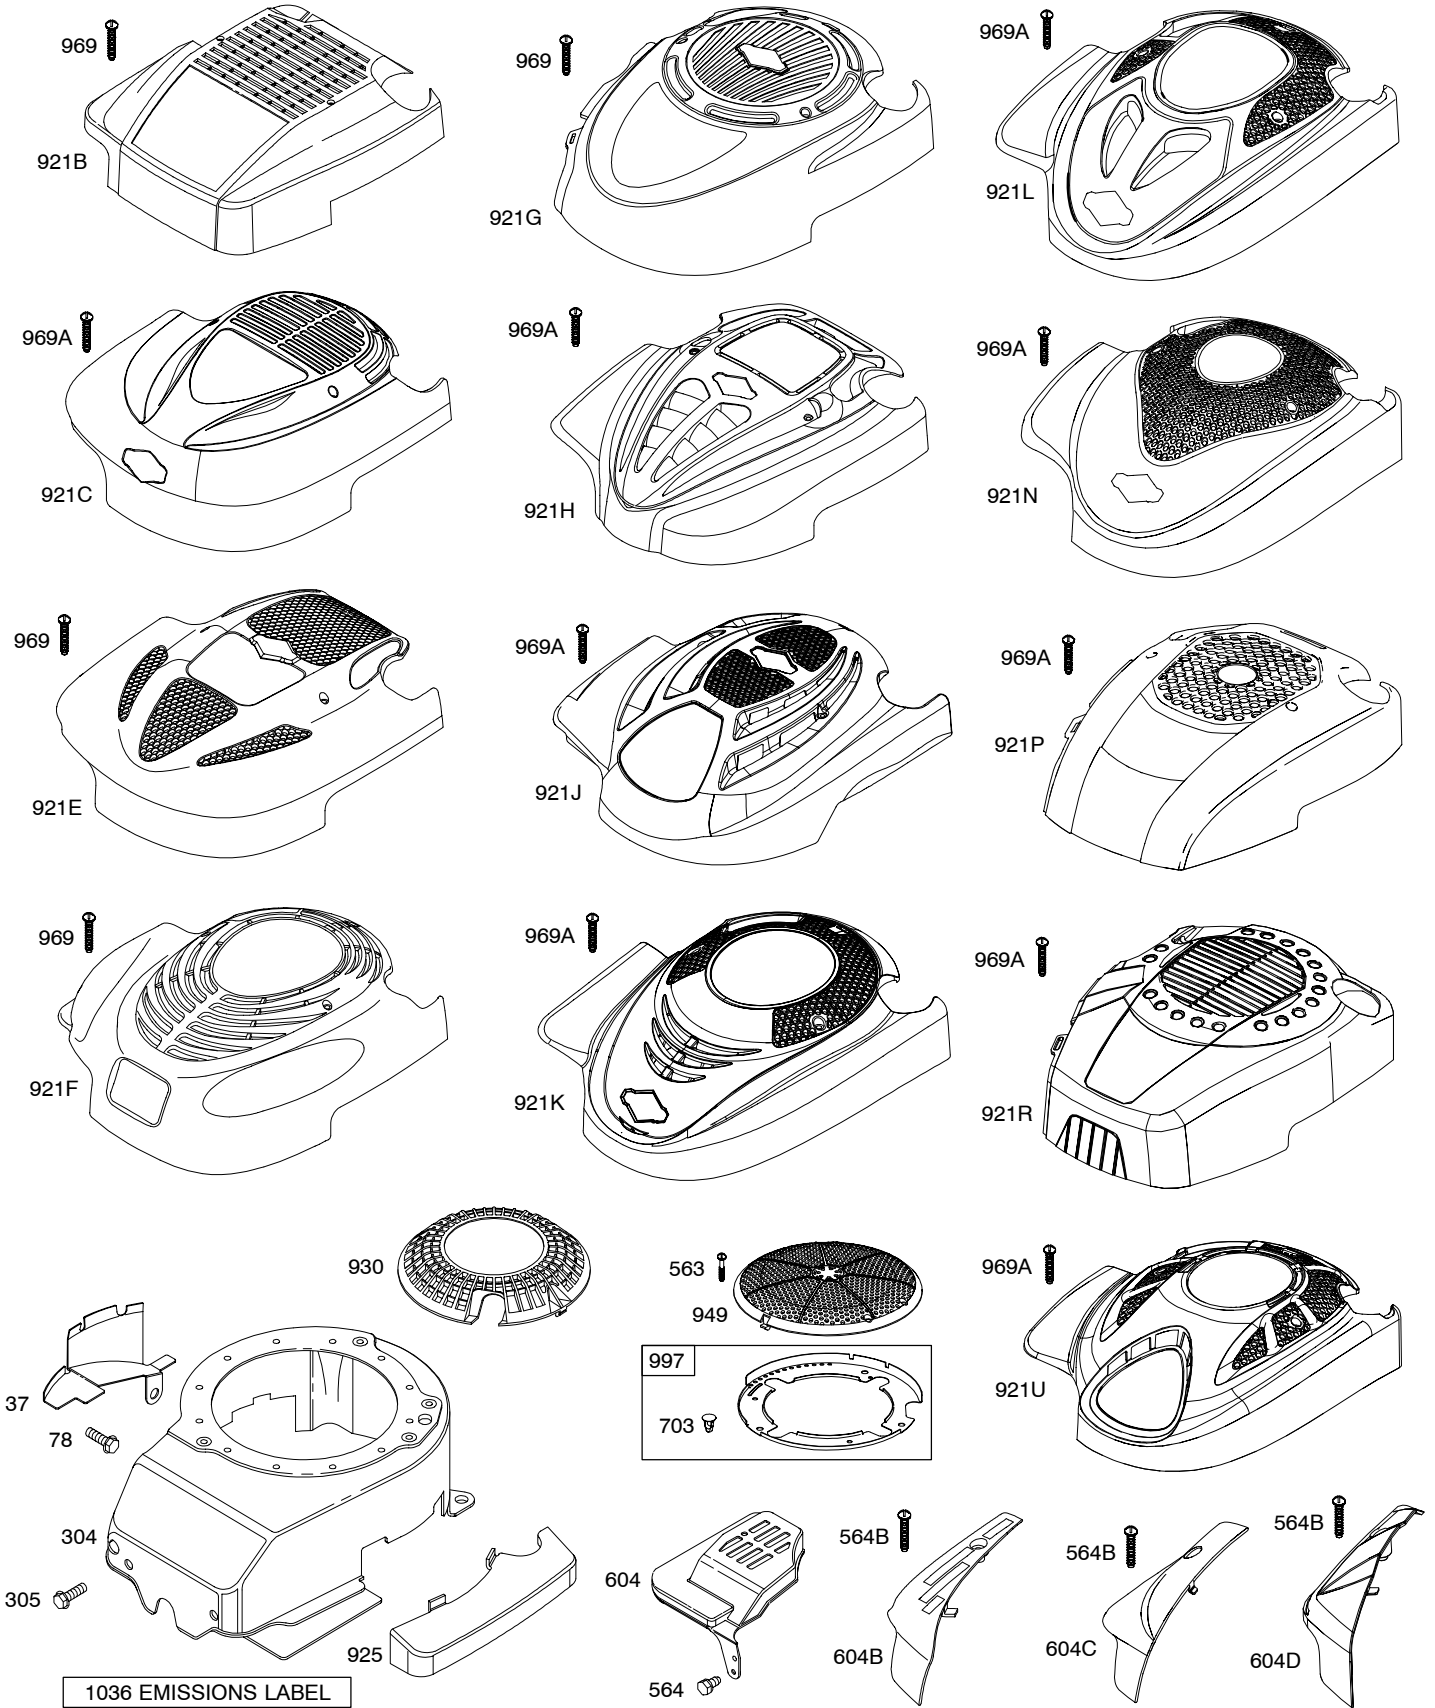

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

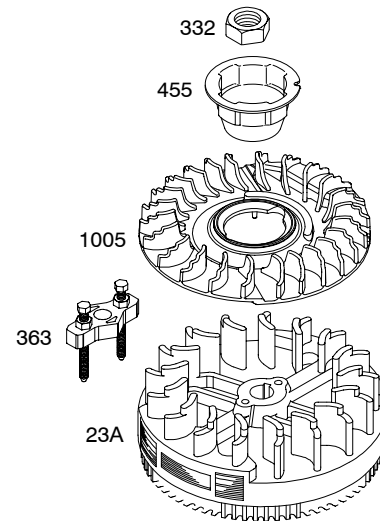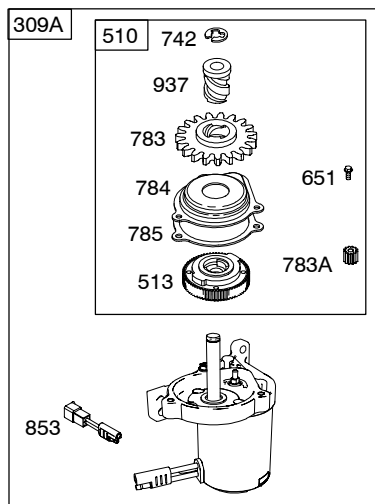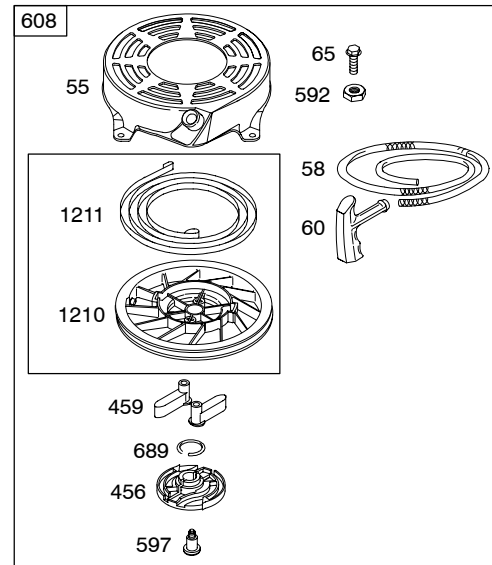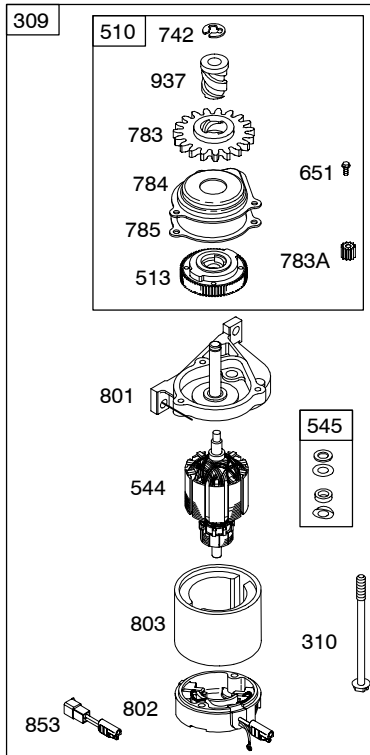

# 126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	16	691450	Crankshaft	20	★399781S	Seal–Oil (PTO Side)
2	399269	Kit–Bushing/Seal (Magneto Side)			----- <b>Note</b> -----	22	691092	Screw (Crankcase Cover/ Sump)
3	★299819S	Seal–Oil (Magneto Side)		691451	Crankshaft Used on Type No(s). 0004,0010,0011,0015, 0060,0121,0135,0138, 0148,0153,0158,0159, 0199,0454,0475,0479, 0487,0491,0615,0660, 1724,1728,1729,1750, 1767,1791,1802,1807, 1817,1820,1822,1824, 1833,1963,2003,2004, 2011,2016,2021,2022, 2034,2091,2388.	23A	691987	Flywheel ----- <b>Note</b> ----- <b>691992</b> Flywheel Used on Type No(s). 0004, 0005, 0006, 0010, 0114, 0116, 0131, 0209, 0523, 0933, 1802, 1807, 1822, 1849, 2013, 2016.
4	493279	Sump–Engine ----- <b>Note</b> ----- <b>498983</b> Sump–Engine Used on Type No(s). 0006.		691452	Crankshaft Used on Type No(s). 0016,0147,0680,0878, 1727,1733,1734,1737, 1738,1739,1740,1748, 1749,1794,1801,1803, 1804,1805,1808,1810, 1814,1816,1818,1821, 1823,1825,1826,1827, 1829,1830,1831,1832, 1835,1837,1839,1844, 1845,1846,1847,1849, 1852,1904,1914,1917, 1926,1941,1958,1965, 1992,1995,2006,2008, 2010,2112,2014,2015, 2017,2023,2027,2035, 2148,2149,2304.	24	222698S	Key–Flywheel
5	691160	Head–Cylinder		691455	Crankshaft Used on Type No(s). 0006,0018,0523.	25	791097	Piston Assembly (Standard) ----- <b>Note</b> ----- <b>791326</b> Piston Assembly (.020" Oversize)
7	★∅692249	Gasket–Cylinder Head		694849	Crankshaft Used on Type No(s). 0005,0114,0131,2013.	26	791098	Ring Set (Standard) ----- <b>Note</b> ----- <b>791324</b> Ring Set (.020" Oversize)
8	695250	Breather Assembly		695242	Crankshaft Used on Type No(s). 0026.	27	691866	Lock–Piston Pin
9	★∅696125	Gasket–Breather		696009	Crankshaft Used on Type No(s). 0115,0139,0204,0206, 0220,0933,1840,1841.	28	499423	Pin–Piston (Standard)
10	691125	Screw (Breather Assembly)		791061	Crankshaft Used on Type No(s). 0116,0209.	29	499424	Rod–Connecting (Standard)
11	691781	Tube–Breather		694478	Crankshaft Used on Type No(s). 0521,0538.	32	691664	Screw (Connecting Rod)
12	★692232	Gasket–Crankcase		691454	Crankshaft Used on Type No(s). 1706.	32A	695759	Screw (Connecting Rod)
13	690912	Screw (Cylinder Head)				33	262651S	Valve–Exhaust
15	691680	Plug–Oil Drain (Square Socket)				34	262652S	Valve–Intake
						35	691270	Spring–Valve (Intake)
						36	691270	Spring–Valve (Exhaust)
						37	694086	Guard–Flywheel

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
40	692194	Retainer-Valve	117	498978	Jet-Main (Standard)	121	498260	Kit-Carburetor Overhaul
43	691997	Slinger-Governor/Oil			----- <b>Note</b> -----	125	498170	Carburetor (Primer System)
45	690548	Tappet-Valve			<b>692677</b> Jet-Main (Standard)			----- <b>Note</b> -----
46	691449	Camshaft			(Used After Code Date 07020600). Used on Type No(s). 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761.			<b>694882</b> Carburetor (Primer System) (Used After Code Date 07020600). Used on Type No(s). 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761.
50A	794305	Manifold-Intake			<b>494870</b> Jet-Main (Standard) (Used Before Code Date 07020700). Used on Type No(s). 0761, 3761.			<b>790821</b> Carburetor (Primer System) (Used Before Code Date 07020700). Used on Type No(s). 0761, 3761.
51	★272199S	Gasket-Intake	117A	498981	Jet-Main (Standard)			
51A	★794306	Gasket-Intake	117B	691428	Jet-Main (Standard) (Used After Code Date 07020600). ----- <b>Note</b> -----	125A	792253	Carburetor (Choke System)
54	691650	Screw (Intake Manifold)			<b>697355</b> Jet-Main (Standard) (Used Before Code Date 07020700).			----- <b>Note</b> -----
55	691421	Housing-Rewind Starter			<b>497315</b> Jet-Main (High Altitude) (Used on Type No(s). 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761.)			<b>790978</b> Carburetor (Used on Type No(s). 1746, 1801, 1802, 1803, 1804, 1805.)
58	697316	Rope-Starter (Cut To Required Length)	118	497466	Jet-Main (High Altitude)	125B	794304	Carburetor (Autochoke System) (Used After Code Date 07020600). ----- <b>Note</b> -----
		----- <b>Note</b> -----			----- <b>Note</b> -----			<b>790845</b> Carburetor (Used Before Code Date 07020700).
		<b>791362</b> Rope-Starter (Used on Type No(s). 0132, 0133.)			<b>497315</b> Jet-Main (High Altitude) (Used on Type No(s). 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761.)	127	●694468	Plug-Welch
60	281434S	Grip-Starter Rope			<b>497315</b> Jet-Main (High Altitude) (Used on Type No(s). 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761.)	130	●696564	Valve-Throttle
65	690837	Screw (Rewind Starter)			<b>497315</b> Jet-Main (High Altitude) (Used on Type No(s). 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761.)	130A	691203	Valve-Throttle
78	691108	Screw (Flywheel Guard)			<b>497315</b> Jet-Main (High Altitude) (Used on Type No(s). 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761.)	133	398187	Float-Carburetor
81	691740	Lock-Muffler Screw	118A	497315	Jet-Main (High Altitude)	134	●398188	Kit-Needle/Seat
95	691636	Screw (Throttle Valve)	118B	695042	Jet-Main (High Altitude) (Used After Code Date 07020600). ----- <b>Note</b> -----	137	◆693981	Gasket-Float Bowl
97	493267	Shaft-Throttle (Metal)			<b>692677</b> Jet-Main (High Altitude) (Used Before Code Date 07020700).	146	690979	Key-Timing
		----- <b>Note</b> -----				163★◆272653		Gasket-Air Cleaner
		<b>696565</b> Shaft-Throttle (Plastic)						
98A	493280	Kit-Idle Speed						
104	●691242	Pin-Float Hinge						
108	691182	Valve-Choke						
108A	790844	Valve-Choke						
109	494218	Shaft-Choke						
109A	498593	Shaft-Choke						
109B	790843	Shaft-Choke						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

# 126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187	791766	Line-Fuel (Cut to Required Length)	209B	699056	Spring-Governor ----- <b>Note</b> ----- <b>691292</b> Spring-Governor Used on Type No(s). 0115, 0116, 0117, 0135, 0139, 0145, 0146, 0147, 0153, 0161, 0199, 0204, 0206, 0209, 0220, 0933, 0951, 0985, 0992, 1003, 1006, 1724, 1733, 1734, 1737, 1738, 1750, 1767, 1791, 1808, 1810, 1816, 1817, 1826, 1827, 1829, 1837, 1839, 1845, 1849, 1850, 1852, 1904, 1941, 1963, 1965, 1966, 1992, 1995, 2003, 2004, 2008, 2011, 2012, 2014, 2017, 2022, 2027, 2034, 2041, 2148, 2149, 2304,. <b>691852</b> Spring-Governor Used on Type No(s). 0158, 0159, 0680, 1706, 1727, 1728, 1729, 1739, 1740, 1748, 1749, 1794, 1807, 1814, 1818, 1820, 1821, 1822, 1823, 1824, 1825, 1830, 1831, 1832, 1833, 1835, 1840, 1841, 1844, 1846, 1847, 1914, 1958, 2006, 2010, 2015, 2016, 2021, 2023, 2035.			<b>691291</b> Spring-Governor Used on Type No(s). 0006, 0010, 0011, 0521, 0538. <b>691851</b> Spring-Governor Used on Type No(s). 0121, 0132, 0133, 0134, 3139, 3140. <b>691290</b> Spring-Governor Used on Type No(s). 0005, 0114, 0131, 2013. <b>791157</b> Spring-Governor Used on Type No(s). 1746, 1801, 1803, 1804, 1805. <b>691835</b> Spring-Governor Used on Type No(s). 1802. <b>790944</b> Spring-Governor Used on Type No(s). 0523.
187A	791873	Line-Fuel (Molded)						
188	693399	Screw (Control Bracket)						
190	690940	Screw (Fuel Tank)						
202	691829	Link-Mechanical Governor						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

3728-10

Assemblies include all parts shown in frames.

09/15/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
217	690354	Spring-Choke Return	269	691026	Wire-Control (Cut to Required Length)	304	695892	Housing-Blower ----- <b>Note</b> -----
222	790143	Bracket-Control (Remote/Manual Friction)(Primer)	270	691027	Nut (Control Wire Casing)			<b>493293</b> Housing-Blower
222A	692021	Bracket-Control (Remote, Choke A Matic, Non Compliance) ----- <b>Note</b> -----	271	691028	Lever-Control			Used on Type No(s). 0015,0016,0018,0025, 0060,0062,0115,0139, 0147,0204,0206,0479, 1727,1728,1733,1734, 1740,1767,1791,1794, 1801,1803,1804,1805, 1810,1814,1821,1832, 1833,1840,1904,1914, 1958,1992,1995,2003, 2004,2006,2010,2023, 2304,2388,3841.
		<b>790982</b> Bracket-Control Used on Type No(s). 1746, 1801, 1803, 1804, 1805.	276 ♦	271716	Washer-Sealing			<b>493294</b> Housing-Blower
222C	692150	Bracket-Control (Variable Speed) (5 Position Manual Choke)	287	690940	Screw (Dipstick Tube)			Used on Type No(s). 0004,0005,0006,0010, 0116,0131,0209,0521, 0523,0538,0878,1729, 1802,1822,1839,1926, 1941,2013,2014,2027, 3139,3140.
222D	791128	Bracket-Control (Fixed Speed)	291	790830	Thermostat			<b>790826</b> Housing-Blower
222E	692982	Bracket-Control (Manual Friction, 5 Position Manual Choke)	300	692038	Muffler ----- <b>Note</b> -----			Used on Type No(s). 0114, 0121, 0132, 0133, 0140, 0158, 0159, 0161, 0200, 0220, 0378, 0454, 0475, 0487, 0491, 0548, 0615, 0625, 0660, 0662, 0675, 0709, 0849, 0867, 0875, 0880, 0893, 0932, 0933, 0985, 0992, 1003, 1006, 1706, 1738, 1807, 1808, 1823, 1825, 1831, 1845, 1847, 1849, 1851, 1963, 1965, 2011, 2015, 2016, 2017, 2021, 2022, 2034, 2041, 3709, 3849.
227	690783	Lever-Governor Control			<b>790828</b> Muffler Used on Type No(s). 0114, 0121, 0132, 0133, 0140, 0158, 0159, 0161, 0200, 0220, 0378, 0454, 0475, 0487, 0491, 0548, 0615, 0625, 0660, 0662, 0675, 0709, 0849, 0867, 0875, 0880, 0893, 0932, 0933, 0985, 0992, 1003, 1006, 1706, 1738, 1807, 1808, 1823, 1825, 1831, 1845, 1847, 1849, 1851, 1963, 1965, 2011, 2015, 2016, 2017, 2021, 2022, 2034, 2041, 3709, 3849.			<b>792677</b> Muffler Used on Type No(s). 1844.
231	691636	Screw (Choke Valve)	300A	494343S	Muffler			<b>790983</b> Housing-Blower
236	691826	Link-Lockout						Used on Type No(s). 0121,0133,0158,0159, 0161,0200,0378,0454, 0487,0491,0548,0615, 0625,0675,0709,0849, 0867,0875,0880,0893, 0909,0923,0985,0992, 1003,1006,1706,1748, 1816,1825,1827,1829, 1831,1835,1844,1845, 1846,1963,1965,2011, 2021,2022,2041,3709, 3849.
265	690798	Clamp-Casing						Used on Type No(s). 0132,0140,0220,0475, 0660,0662,0880,0893, 0933,1738,1739,1808, 1823,1826,1847,2015, 2017.
265A	691024	Clamp-Casing						<b>791291</b> Housing-Blower
265B	692179	Clamp-Casing						Used on Type No(s). 0114,1807,1849,2016, 2034.
267	691044	Screw (Casing Clamp)						
268	691025	Casing-Control Wire (Cut to Required Length)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

# 126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	691108	Screw (Blower Housing)	334	691061	Screw (Magneto Armature)	523	499621	Dipstick
306	690450	Shield-Cylinder	337	802592S	Plug-Spark (Resistor)	524	★692296	Seal-Dipstick Tube
306A	790836	Shield-Cylinder				525	495265	Tube-Dipstick
307	690345	Screw (Cylinder Shield)			----- <b>Note</b> -----	529	691923	Grommet
309	695550	Motor-Starter (Used Before Code Date 07052900).			697451 Plug-Spark (EMS)	544	690786	Armature-Starter
309A	795092	Motor-Starter (Used After Code Date 07052800).	346	690661	Screw (Spark Arrester)	545	492919	Washer Set
310	692327	Bolt (Starter Motor)	347	691396	Switch-Rocker	562	92613	Bolt (Governor Control Lever)
332	690662	Nut (Flywheel)	356	692390	Wire-Stop	563	691138	Screw (Debris Guard Screen)
333	802574	Armature-Magneto ----- <b>Note</b> -----	356B	693010	Wire-Stop	564B	698589	Screw (Control Cover)
		790817 Armature- Magneto Used on Type No(s). 0487, 0761, 1817, 2034, 3761.	356D	496381	Wire-Stop	564	690664	Screw (Control Cover)
333A	793353	Armature-Magneto ----- <b>Note</b> -----	356H	690791	Wire-Stop	578	398153	Wire-Assembly
		793354 Armature- Magneto Used on Type No(s). 0121, 0158, 0159, 0680, 0875, 0893, 0909, 1706, 1739, 1748, 1749, 1750, 1807, 1808, 1816, 1823, 1824, 1825, 1826, 1827, 1829, 1831, 1835, 1837, 1844, 1845, 1846, 1847, 1849, 1850, 1917, 1963, 1965, 2011, 2015, 2016, 2017, 2021, 2035, 2041.	358	794307	Gasket Set-Engine	584	697734	Cover-Breather Passage
			363	19069	Flywheel Puller	585	★691879	Gasket-Breather Passage
			365	691688	Screw (Carburetor)	592	690800	Nut (Rewind Starter)
			383	89838S	Wrench-Spark Plug	597	691696	Screw (Pawl Friction Plate)
			404	690272	Washer (Governor Crank)	601	791850	Clamp-Hose
			425A	690670	Screw (Air Cleaner Cover)	601A	691038	Clamp-Hose
			443A	692523	Screw (Air Cleaner Primer Base)	604	691757	Cover-Control
			445A	491588S	Filter-Air Cleaner Cartridge	604B	790703	Cover-Control
			455	791960	Cup-Flywheel	604C	792418	Cover-Control
			456	692299	Plate-Pawl Friction	604D	793770	Cover-Control
			459	281505S	Plate-Ratchet	608	497680	Starter-Rewind ----- <b>Note</b> -----
			474	691991	Alternator			791363 Starter- Rewind Used on Type No(s). 0132, 0133, 0479, 0487, 0491.
			497	690664	Screw (Stop Switch Bracket)			
			500	691086	Washer (Key Switch)			
			505	691251	Nut (Governor Control Lever)			
			510	795093	Drive-Starter			
			513	692358	Clutch-Drive			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

3728-12

Assemblies include all parts shown in frames.

09/15/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
613	691340	Screw (Muffler) ----- <b>Note</b> ----- <b>790833</b> Screw (Muffler) Used on Type No(s). 0114, 0121, 0132, 0133, 0140, 0158, 0159, 0161, 0200, 0220, 0378, 0454, 0475, 0487, 0491, 0548, 0615, 0625, 0660, 0662, 0675, 0709, 0849, 0867, 0875, 0880, 0893, 0932, 0933, 0985, 0992, 1003, 1006, 1706, 1738, 1807, 1808, 1823, 1825, 1831, 1845, 1847, 1849, 1851, 1963, 1965, 2011, 2017, 2015, 2016, 2021, 2022, 2034, 2041, 3709, 3849. <b>792678</b> Screw (Muffler) Used on Type No(s). 1844.	651	691660	Screw (Starter Gear Cover)	836	690664	Screw (Muffler Guard)
613A	691653	Screw (Muffler)	664	691087	Nut (Key Switch)	836B	691147	Screw (Muffler Guard)
615	690340	Retainer-Governor Shaft	668	★493823	Spacer	836C	790745	Screw (Muffler Guard)
616	698801	Crank-Governor	670	692294	Spacer-Fuel Tank	842	★691031	Seal-O Ring (Dipstick Tube)
617★◆	270344	Seal-O Ring (Intake Manifold)	676	396548	Deflector-Muffler	843	691884	Sleeve-Lever (Speed Control)
621	692310	Switch-Stop	676C	493871	Deflector-Muffler	843A	691895	Sleeve-Lever (Choke)
627	792565	Bracket-Stop Switch	677	690661	Screw (Muffler Deflector)	847	692047	Dipstick/Tube Assembly
627A	793211	Bracket-Stop Switch	684	690345	Screw (Breather Passage Cover)	851	493880S	Terminal-Spark Plug
633	◆691321	Seal-Choke/Throttle Shaft	689	691855	Spring-Friction	851A	692424	Terminal-Spark Plug
633A	◆693867	Seal-Choke/Throttle Shaft	692	690572	Spring-Detent	853	695268	Adapter-Wire
635	66538S	Boot-Spark Plug	697	691127	Screw (Drive Cap)	868	697338	Seal-Valve
635A	793351	Boot-Spark Plug	703	696309	Clip	869	691155	Seat-Valve (Intake)
			718	690959	Pin-Locating	870	690380	Seat-Valve (Exhaust)
			741	790345	Gear-Timing (Use Without Woodruff Key) ----- <b>Note</b> ----- <b>691830</b> Gear-Timing (Uses Woodruff Key)	871	262001	Bushing-Valve Guide (Exhaust) ----- <b>Note</b> ----- <b>63709</b> Bushing-Valve Guide (Intake)
			742	93941	Retainer-E Ring	883	★∅691881	Gasket-Exhaust
			745	691648	Screw (Brake)	892	690646	Switch-Key
			783	691918	Gear-Pinion	910	691094	Stud (Alternator)
			783A	691269	Gear-Pinion	921B	692931	Cover-Blower Housing
			784	795095	Cover-Starter Gear	921C	695889	Cover-Blower Housing
			785	692352	Gasket-Starter Cover	921E	696262	Cover-Blower Housing
			789B	792685	Harness-Wiring	921F	697343	Cover-Blower Housing
			801	690782	Cap-Drive	921G	790701	Cover-Blower Housing
			802	695267	Cap-End	921H	790037	Cover-Blower Housing
			803	695266	Housing-Starter	921I	790036	Cover-Blower Housing
			832	499034	Guard-Muffler	921K	699984	Cover-Blower Housing
			832A	691424	Guard-Muffler	921L	791026	Cover-Blower Housing
			832B	497683	Guard-Muffler	921N	792675	Cover-Blower Housing
			832E	793568	Guard-Muffler	921P	792687	Cover-Blower Housing
						921R	793771	Cover-Blower Housing
						921U	794355	Cover-Blower Housing

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

# 126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
922	691831	Spring-Brake	970	691669	Screw	1095	498528	Gasket Set-Valve
922A	692135	Spring-Brake			(Air Cleaner Primer	1119	692979	Screw
923	691994	Brake			Bracket)			(Alternator)
923A	695891	Brake	972B	699374	Tank-Fuel	1160	690345	Screw
925	690595	Cover-Linkage			(Plastic)			(Interlock Switch)
930	691919	Guard-Rewind	975	493640	Bowl-Float	1210	498144	Pulley/Spring
935	499421	Switch-Interlock	976	694395	Primer-Carburetor			Assembly
937	691325	Spline-Starter	977	498261	Gasket Set-Carburetor			(Pulley)
946	691738	Stop-Rope	990	691959	Key Set	1211	498144	Pulley/Spring
949	696306	Guard-Debris Screen	994	398067	Arrestor-Spark			Assembly
957B	699985	Cap-Fuel Tank	997	696310	Shield-Debris			(Spring)
		(Plastic)	1005	691346	Fan-Flywheel	1319	794467	Label-Warning
958	698183	Valve-Fuel Shut Off	1019	694881	Kit-Label	1330	270962	Manual-Repair
		(Plastic)	1036		Label-Emissions	1386	790848	Vane-Air
966B	792040	Base-Air Cleaner			(Available From A			(Autochoke System)
		Primer			Briggs & Statton	1387	790849	Spring-Air Vane
967A	493537S	Filter-Pre Cleaner			Authorized Dealer)	1388	790850	Screw
968B	692298	Cover-Air Cleaner	1058	277039	Operator's Manual			(Air Vane)
969	690700	Screw	1059	692311	Kit-Screw/Washer			
		(Blower Housing						
		Cover)						
969A	691138	Screw						
		(Blower Housing						
		Cover)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

3728-14

Assemblies include all parts shown in frames.

09/15/2007